

Hitachi Power Tools

SERVICE MANUAL

LIST Nos.
PDA-100K: E265
G 10SK3: E264
Dec. 2003

PRODUCT NAME


Hitachi Disc Grinder

Models PDA-100K
G 10SK3

CONTENTS

Page

PRECAUTIONS IN DISASSEMBLY AND REASSEMBLY	1
1. Disassembly	1
2. Reassembly	2
3. Lubrication Points and Types of Lubricant	5
4. Tightening Torque	5
5. Wiring Diagram	5
6. Insulation Tests	6
7. No-load Current Value	6
STANDARD REPAIR TIME (UNIT) SCHEDULES	7

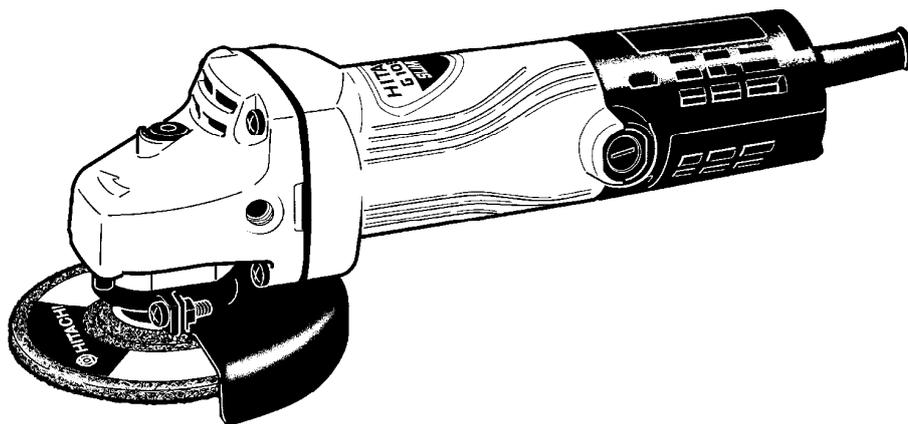

P

HITACHI

 **Hitachi Koki Co., Ltd.**
International Sales Division

1. PRECAUTIONS IN DISASSEMBLY AND REASSEMBLY

The **[Bold]** numbers in the descriptions below correspond to the item numbers in the Parts List and the exploded assembly diagram for Model PDA-100K, and the **<Bold>** numbers to those in the Parts List and the exploded assembly diagram for Model G 10SK3.

1-1. Disassembly

(1) Disassembly of the armature

- 1) Remove the Brush Caps **[40]** **<39>** and take out the Carbon Brushes **[41]** **<40>**.
- 2) Loosen the four Machine Screws M5 x 22 **[1]** or the four Tapping Screws D5 x 25 (Black) **<1>** which fix the Gear Cover Ass'y **[4]** **<3>** to remove the Armature **[8]** **<7>** from the Housing Ass'y **[35]** **<34>** together with the Bearing Holder **[7]** **<6>**.
- 3) Loosen the Special Nut M7 **[5]** **<4>** which fixes the pinion to remove the pinion.
- 4) Insert the hooks of the J-204 bearing puller between the Ball Bearing 628VVC2PS2-L **[6]** **<5>** and the Bearing Holder **[7]** **<6>** from both sides and fix the hooks with the wing bolts.
- 5) Place the J-204 bearing puller on a supporting jig and push down on the tip of the armature shaft with a hand press to remove the Ball Bearing 628VVC2PS2-L **[6]** **<5>**. Then remove the Bearing Holder **[7]** **<6>**.

(2) Disassembly of the dust seal

- 1) Insert the hooks of the J-204 bearing puller between the commutator and the Dust Seal **[12]** **<11>** from both sides, and fix the hooks with the wing bolts.
- 2) Place the J-204 bearing puller on a supporting jig and push down on the armature shaft with a hand press to remove the Dust Seal **[12]** **<11>** together with the Ball Bearing 626VVC2PS2L **[13]** **<12>**. Replace the Dust Seal **[12]** **<11>** with new one because it is damaged by the removal of the Ball Bearing 626VVC2PS2L **[13]** **<12>**.

(3) Disassembly of stator (A)

- 1) Remove the Armature **[8]** **<7>** and loosen the Tapping Screw (W/Flange) D4 x 25 (Black) **[49]** **<48>** to remove Tail Cover (B) **[48]** **<47>**.
- 2) Loosen the two Machine Screws (W/Washer) M3.5 x 6 **[50]** **<49>** that secure the internal wire of the Cord **[56]** **<55>** and Stator (A) **[11]** **<10>** to the Switch (1P Screw Type) **[51]** **<50>** and loosen the two screws of the Pillar Terminal **[45]** **<44>**. Remove the two internal wires from the Cord **[56]** **<55>** and the Pillar Terminal **[45]** **<44>**.
- 3) Remove the Tapping Screw (W/Flange) D4 x 40 **[39]** **<38>** and the Tapping Screw (W/Flange) D4 x 20 (Black) **[38]** **<37>**. Remove Tail Cover (A) **[37]** **<36>** then remove the Earth Terminal **[43]** **<42>** from the Housing Ass'y **[35]** **<34>**.
- 4) Disconnect the two internal wires of Stator (A) **[11]** **<10>** coming from the Brush Holder **[42]** **<41>** from Stator (A) **[11]** **<10>**.

- 5) Remove the Fan Guide [9] <8> from the Housing Ass'y [35] <34>.
 - 6) Loosen the Tapping Screw D4 x 70 [10] or the Tapping Screw (W/Flange) D4 x 70 <9> securing Stator (A) [11] <10>. Remove Stator (A) [11] <10> from the Housing Ass'y [35] <34>.
- (4) Disassembly of the gear
- 1) Loosen the four Seal Lock Screws (W/Sp. Washer) M4 x 12 [23] <22> that secure the Packing Gland [22] <21> to the Gear Cover Ass'y [4] <3> and remove the Packing Gland [22] <21> from the Gear Cover Ass'y [4] <3>.
 - 2) Remove the Retaining Ring for D11 Shaft [15] <14> that secures the gear to the Spindle [25] <24>.
 - 3) Remove the Wave Washer [16] <15> and the gear from the Spindle [25] <24>.

2. Reassembly

Push the parts together in the reverse order of disassembly, with the precautions given below.

- (1) Ensure that the terminals of the stator are not bent or otherwise damaged.
- (2) Generously lubricate the teeth of the gear and the pinion with grease. Rub grease onto the teeth with your fingers so that the grease reaches each tooth bottom. Note that the gear and the pinion may wear faster than normal if under-lubricated.
- (3) Be sure to soak the inner diameter of the Felt Packing [21] <20> with machine oil. Otherwise, its dust-sealing function will fail to work properly, resulting in earlier damage of the Ball Bearing 6201VVCMP2L [20] <19>.
- (4) When replacing the Armature [8] <7> and the Ball Bearing 626VVC2PS2L [13] <12> on the commutator side, press inward on the Dust Seal [12] <11> while taking care of its direction until the end face of the Dust Seal [12] <11> contacts against the end surface of the Armature [8] <7> and make sure that Dust Seal [12] <11> cannot be turned freely by hand. Keep the end face of the armature shaft approximately 0.2 mm (reference) distance inward of the end face of the Ball Bearing 626VVC2PS2L [13] <12> (see Fig. 1).
The Dust Seal [12] <11> is an important element for improved dust protection of the Ball Bearing 626VVC2PS2L [13] <12>. Be sure to replace with a new one each time.

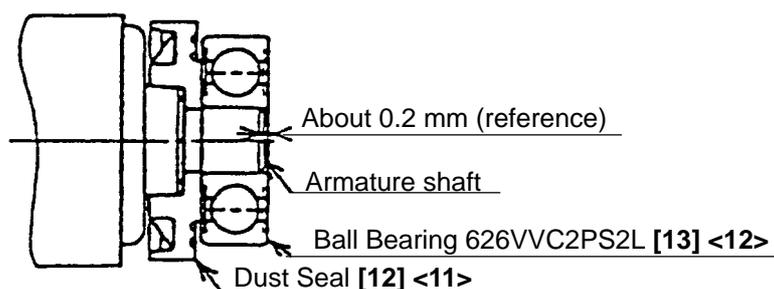


Fig. 1

- (5) When connecting the Earth Terminal [43] <42> to the internal wire (the middle wire among three) of the Noise Suppressor [47] <46>, strip the insulation sheath on the internal wire by about 6 mm and press-connect it together with the Earth Terminal [43] <42> with a clamping tool available on the market.

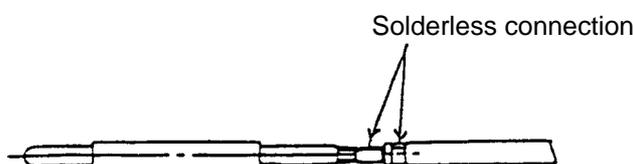


Fig. 2

(6) Mount the Cord [56] <55> according to the following procedure when replacing the standard cord (cord armor is integrally molded).

- 1) Remove the standard cord (cord armor is integrally molded) according to the procedure of 8-1 (3).
- 2) Strip the coating on the internal wire of the Cord [56] <55> about 10 mm from the tip and crimp the Terminal [52] <51> to the brown or black internal wire as shown in Fig. 3.

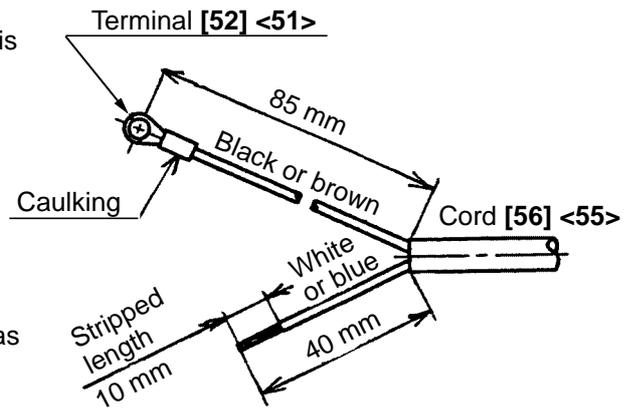


Fig. 3

- 3) Insert the Cord [56] <55> into the Cord Armor D8.8 [53] <52>.
- 4) Cut off the rib for holding the cord of Tail Cover (B) [48] <47> with nippers as shown in Fig. 4.
- 5) Mount the Cord [56] <55> and the Cord Armor D8.8 [53] <52> to Tail Cover (A) [37] <36> and secure them with the Cord Clip [54] <53> and two Tapping Screws (W/Flange) D4 x 16 [55] <54> as shown in Fig. 5.
- 6) Mount each internal wire reversing the removal procedure. Then mount Tail Cover (B) [48] <47> to Tail Cover (A) [37] <36> and secure them with the Tapping Screw (W/Flange) D4 x 25 (Black) [49] <48>.


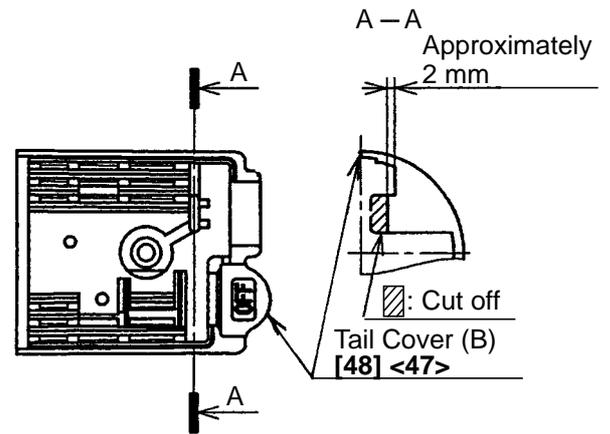



Fig. 4

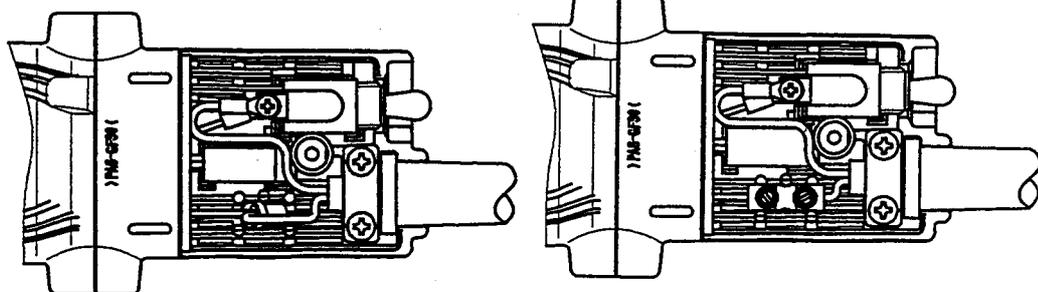

(a) For Taiwan and Korea

(b) For China

Fig. 5-1

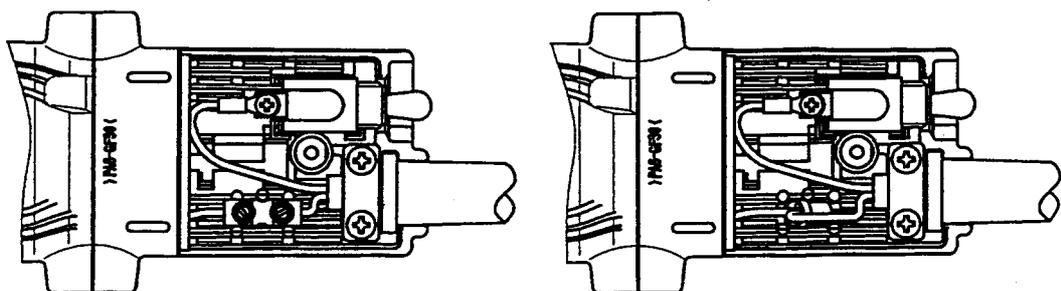

(c) For Singapore and Malaysia

(d) For other countries

Fig. 5-2

- (7) Connect the internal wires of Stator (A) [11] <10> correctly as shown in Fig. 6 and Fig. 7.
- (8) Connect each internal wire correctly as shown in Fig. 5 being careful not to put them between the parts.

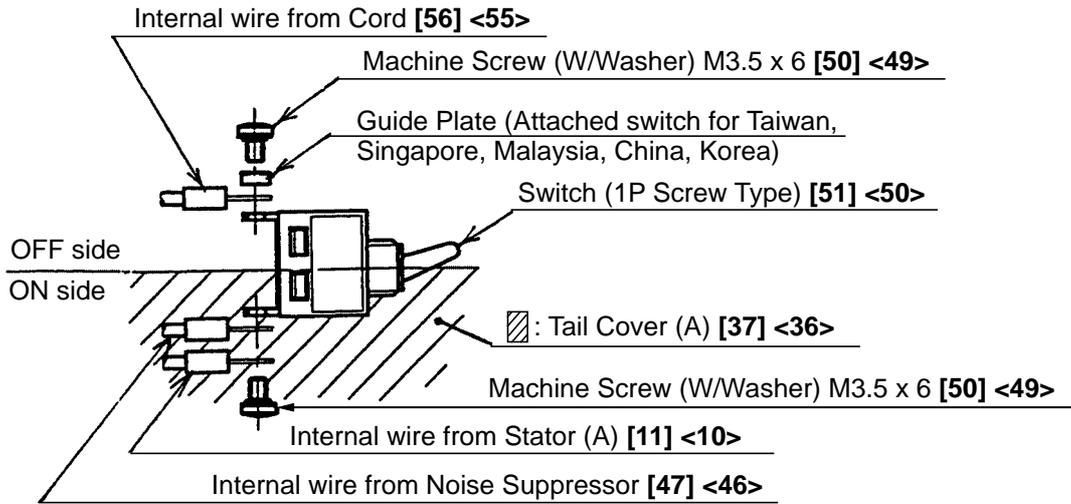


Fig. 6

Insert the terminal securely then push and fold the terminal toward the outside of the housing as much as possible.

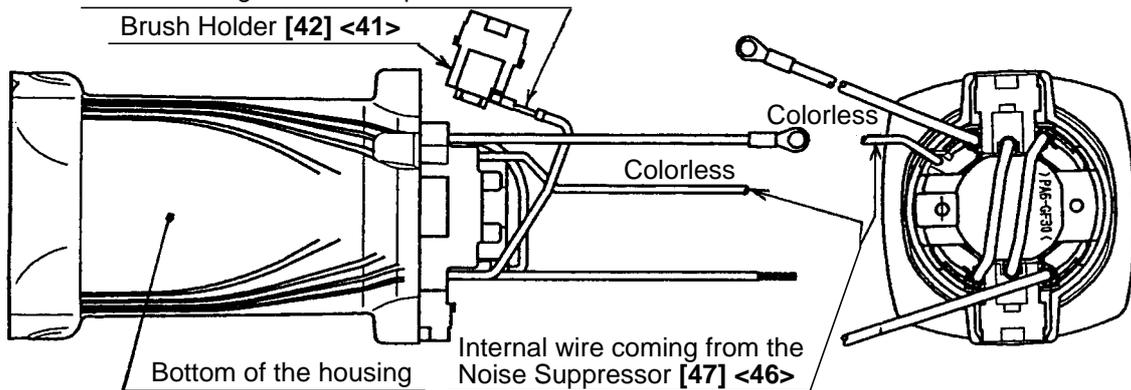


Fig. 7

- (9) When replacing the Gear Cover Ass'y [4] <3>, lubricate the needle bearing part with mixed oil.

Mixed oil: A mixture of Hitachi Power Tool Grease No. 2 (Unilube No. 00 Code No. 939302 is recommended) and turbine oil

- Mixture ratio 1:1 (weight ratio)
- Quantity 0.5 cc

%3. Lubrication Points and Types of Lubricant

- Pinion chamber of Gear Cover Ass'y [4] <3> Nippeco grease (SEP-3A) 5 g
(Code No. 930035 is recommended.)

Generously rub grease onto the gear and pinion.
- Needle bearing Mixed oil 0.5 cc
 Mixed oil: Mixture of Hitachi Power Tool Grease No. 2
 (Unilube No. 00, Code No. 939302) and turbine oil
 Mixture ratio 1:1 (weight ratio)


%4. Tightening Torque

Tapping Screws D4


- [10] <9> [38] <37> [39] <38> [49] <48> [55] <54> $2.0 \pm 0.5 \text{ N}\cdot\text{m}$ ($20 \pm 5 \text{ kgf}\cdot\text{cm}$, $1.5 \pm 0.4 \text{ lb}\cdot\text{ft}$.)
- Seal Lock Screws (W/Sp. Washer) M4 [18] <17> [23] <22> .. $1.8 \pm 0.4 \text{ N}\cdot\text{m}$ ($18 \pm 4 \text{ kgf}\cdot\text{cm}$, $1.3 \pm 0.3 \text{ lb}\cdot\text{ft}$.)
- Machine Screw M5 [1] $3.7 \pm 0.7 \text{ N}\cdot\text{m}$ ($35 \pm 7 \text{ kgf}\cdot\text{cm}$, $2.6 \pm 0.6 \text{ lb}\cdot\text{ft}$.)
- Tapping Screw D5 <1> $2.9 \pm 0.5 \text{ N}\cdot\text{m}$ ($30 \pm 5 \text{ kgf}\cdot\text{cm}$, $2.2 \pm 0.4 \text{ lb}\cdot\text{ft}$.)
- Machine Screw (W/Sp. Washer) M5 [27] <26> $1.6 \pm 0.4 \text{ N}\cdot\text{m}$ ($16 \pm 4 \text{ kgf}\cdot\text{cm}$, $1.2 \pm 0.3 \text{ lb}\cdot\text{ft}$.)
- Special Nut M7 [5] <4> $6.4 \pm 1.0 \text{ N}\cdot\text{m}$ ($65 \pm 10 \text{ kgf}\cdot\text{cm}$, $4.7 \pm 0.7 \text{ lb}\cdot\text{ft}$.)
- Brush Cap [40] <39> $0.6 \pm 0.2 \text{ N}\cdot\text{m}$ ($6 \pm 2 \text{ kgf}\cdot\text{cm}$, $0.4 \pm 0.1 \text{ lb}\cdot\text{ft}$.)

%5. Wiring Diagram


(1) For Taiwan

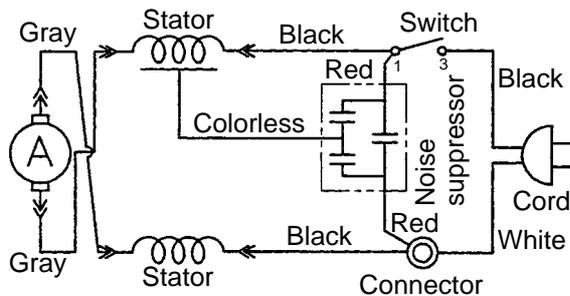


(2) For Korea

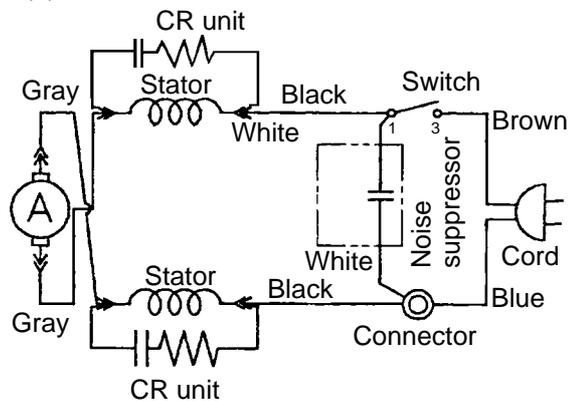


(3) For China

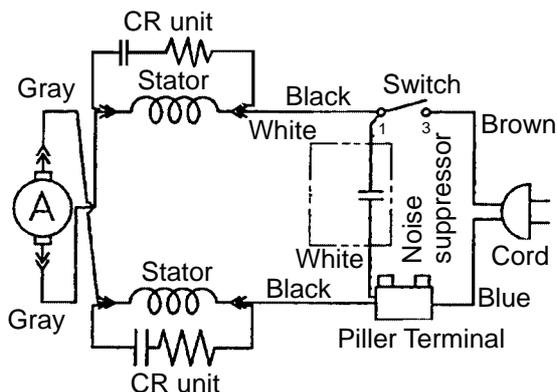

(4) For Singapore and Malaysia

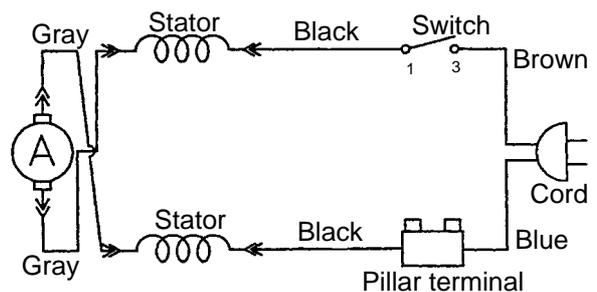

(5) For other countries

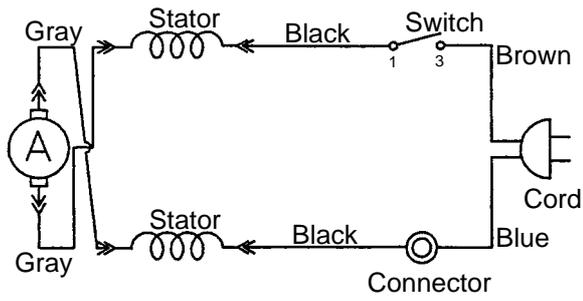

%6. Insulation Tests

On completion of disassembly and repair, carefully measure the insulation resistance and conduct a dielectric strength test.

Insulation resistance: 7 MΩ or more with 500 V DC megohm tester

Dielectric strength test: AC 4,000 V/1 minute with no abnormalities 220 V – 240 V products

AC 2,500 V/1 minute with no abnormalities 110 V – 127 V products

%7. No-load Current Value

After no-load running for 30 minutes, the no-load current value should be as follows.

Voltage (V)	110	220	230	240
Current (A) max.	3.0	1.6	1.8	1.7

& STANDARD REPAIR TIME (UNIT) SCHEDULES

MODEL	Variable		10	20	30	40	50	60 min.
	Fixed							
PDA-100K G 10SK3		Work Flow						
		Switch Tail Cover (A) Tail Cover (B) Cord Cord Armor			Housing Ass'y Stator			
	General Assembly			Armature Ball Bearing (628VV) Bearing Holder Dust Seal Ball Bearing (626VV) Rubber Bushing				
				Gear Cover Ass'y Pushing Button Lock Pin		Packing Gland Ball Bearing (6201VV) Spindle Gear and Pinion Set		
		Wheel Guard Ass'y						


ELECTRIC TOOL PARTS LIST

DISC GRINDER

2003 • 12 • 15

Model PDA-100K

(E1)

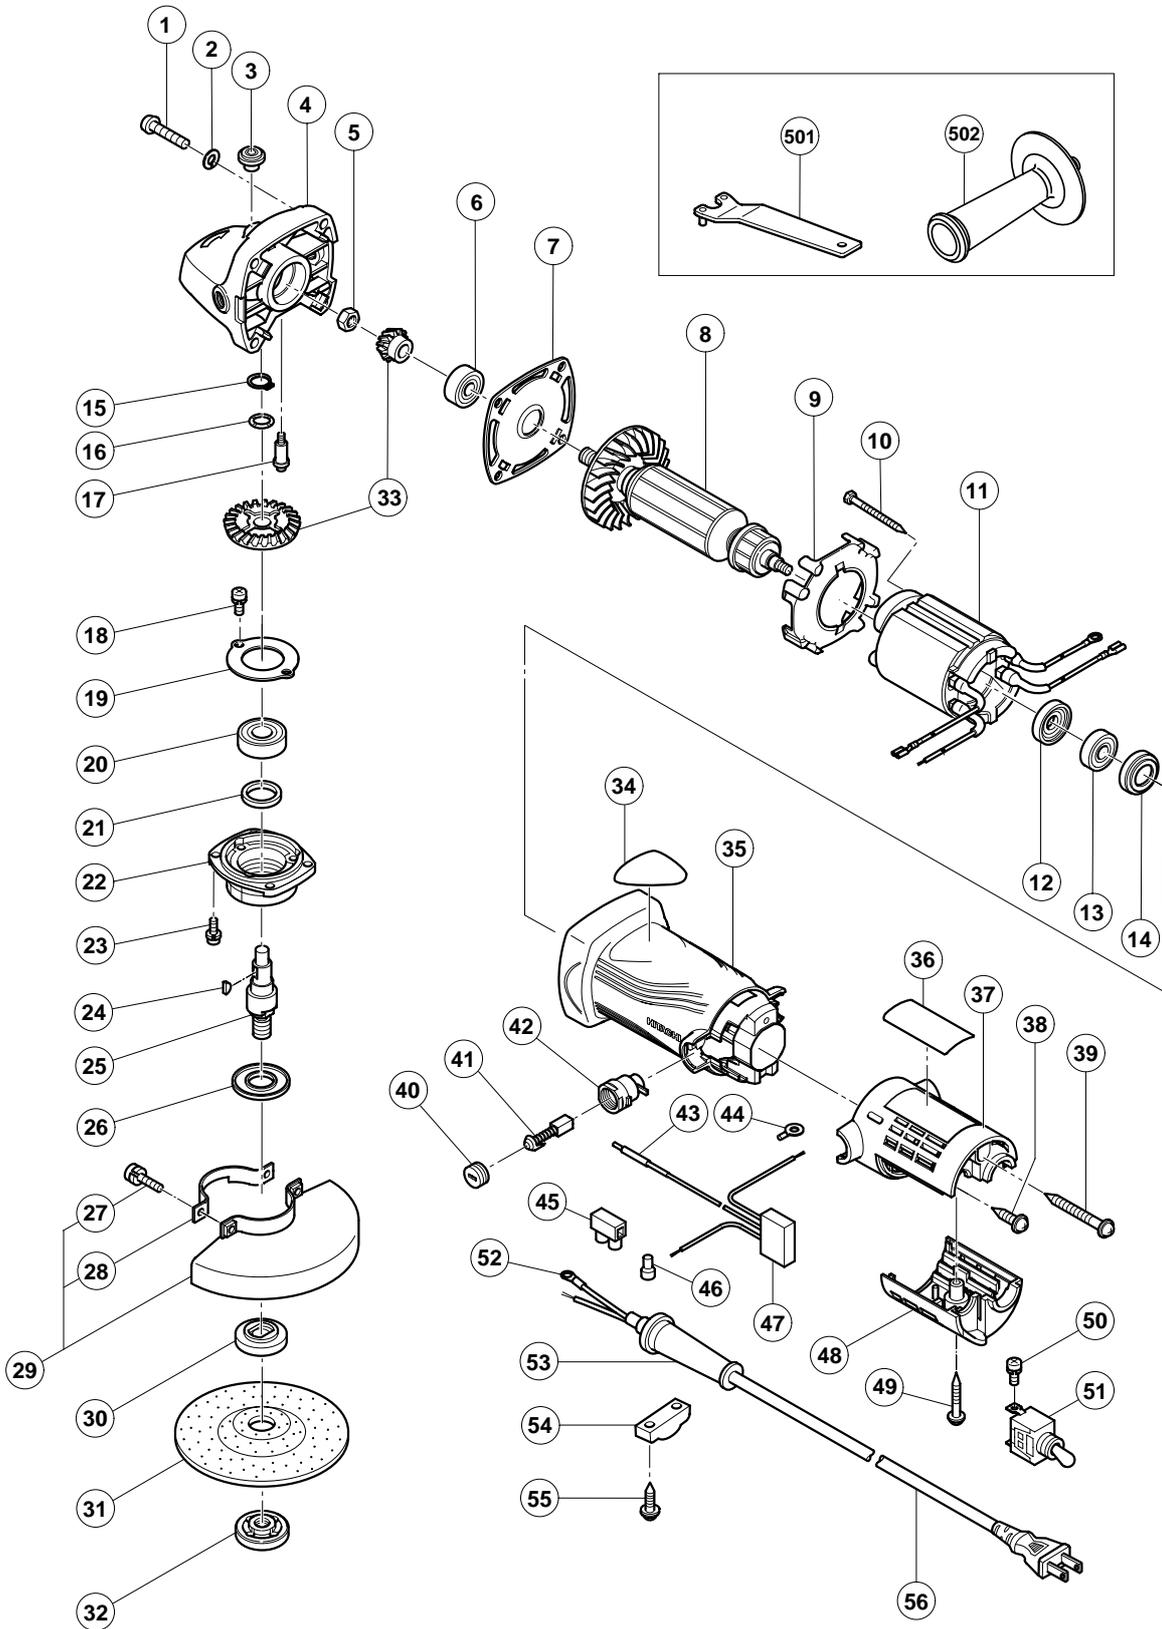

PARTS


PDA-100K

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS
1	949-242	MACHINE SCREW M5X22 (10 PCS.)	4	
2	949-454	SPRING WASHER M5 (10 PCS.)	4	
3	301-944	PUSHING BUTTON	1	
4	316-484	GEAR COVER ASS'Y	1	INCLUD. 3, 17
5	301-941	SPECIAL NUT M7	1	
6	628-VVC	BALL BEARING 628VVC2PS2-L	1	
7	316-480	BEARING HOLDER	1	
* 8	360-567C	ARMATURE 110V	1	
* 8	360-567E	ARMATURE 220V-240V	1	
9	319-898	FAN GUIDE	1	
10	320-677	TAPPING SCREW D4X70	2	
* 11	340-514C	STATOR (A) 110V	1	
* 11	340-514E	STATOR (A) 220V-230V	1	
* 11	340-514G	STATOR (A) 220V-230V	1	FOR CHN, KOR
* 11	340-514F	STATOR (A) 240V	1	
12	313-775	DUST SEAL	1	
13	626-VVM	BALL BEARING 626VVC2PS2L	1	
14	309-929	RUBBER BUSHING	1	
15	316-487	RETAINING RING FOR D11 SHAFT	1	
16	316-486	WAVE WASHER	1	
17	301-943	LOCK PIN	1	
18	997-263	SEAL LOCK SCREW (W/SP. WASHER) M4X10	2	
19	316-490	BEARING COVER	1	
20	620-1VV	BALL BEARING 6201VVCMP2L	1	
21	301-946	FELT PACKING	1	
22	316-489	PACKING GLAND	1	
23	307-127	SEAL LOCK SCREW (W/SP. WASHER) M4X12	4	
24	302-047	WOODRUFF KEY	1	
25	316-485	SPINDLE	1	
26	301-945	FRINGER	1	
27	308-386	MACHINE SCREW (W/SP. WASHER) M5X16 (BLACK)	2	
28	301-949	SET PLATE	1	
29	301-948	WHEEL GUARD ASS'Y	1	INCLUD. 27, 28
* 30	320-497	WHEEL WASHER	1	
* 30	320-496	WHEEL WASHER	1	FOR KOR
* 31	316-820	D. C. WHEELS 100MMX4T A36Q (25 PCS.)	1	
* 31	939-640	D. C. WHEELS 100MMX4T A36Q (20 PCS.)	1	FOR KOR
* 32	321-795	WHEEL NUT (C)	1	
* 32	938-062	WHEEL NUT (B)	1	FOR KOR
33	321-450	GEAR AND PINION SET	1	
34		HITACHI LABEL	1	
35	320-675	HOUSING ASS'Y	1	INCLUD. 14
36		NAME PLATE	1	
37	322-533	TAIL COVER (A)	1	
38	302-086	TAPPING SCREW (W/FLANGE) D4X20 (BLACK)	1	
39	306-664	TAPPING SCREW (W/FLANGE) D4X40	1	
40	936-551	BRUSH CAP	2	
41	999-021	CARBON BRUSH (1 PAIR)	2	
42	313-777	BRUSH HOLDER	2	
* 43	314-854	EARTH TERMINAL	1	FOR TPE
* 44	980-063	TERMINAL	1	FOR NOISE SUPPRESSOR

ELECTRIC TOOL PARTS LIST

■ DISC GRINDER
Model G 10SK3

2003 • 12 • 15
(E1)

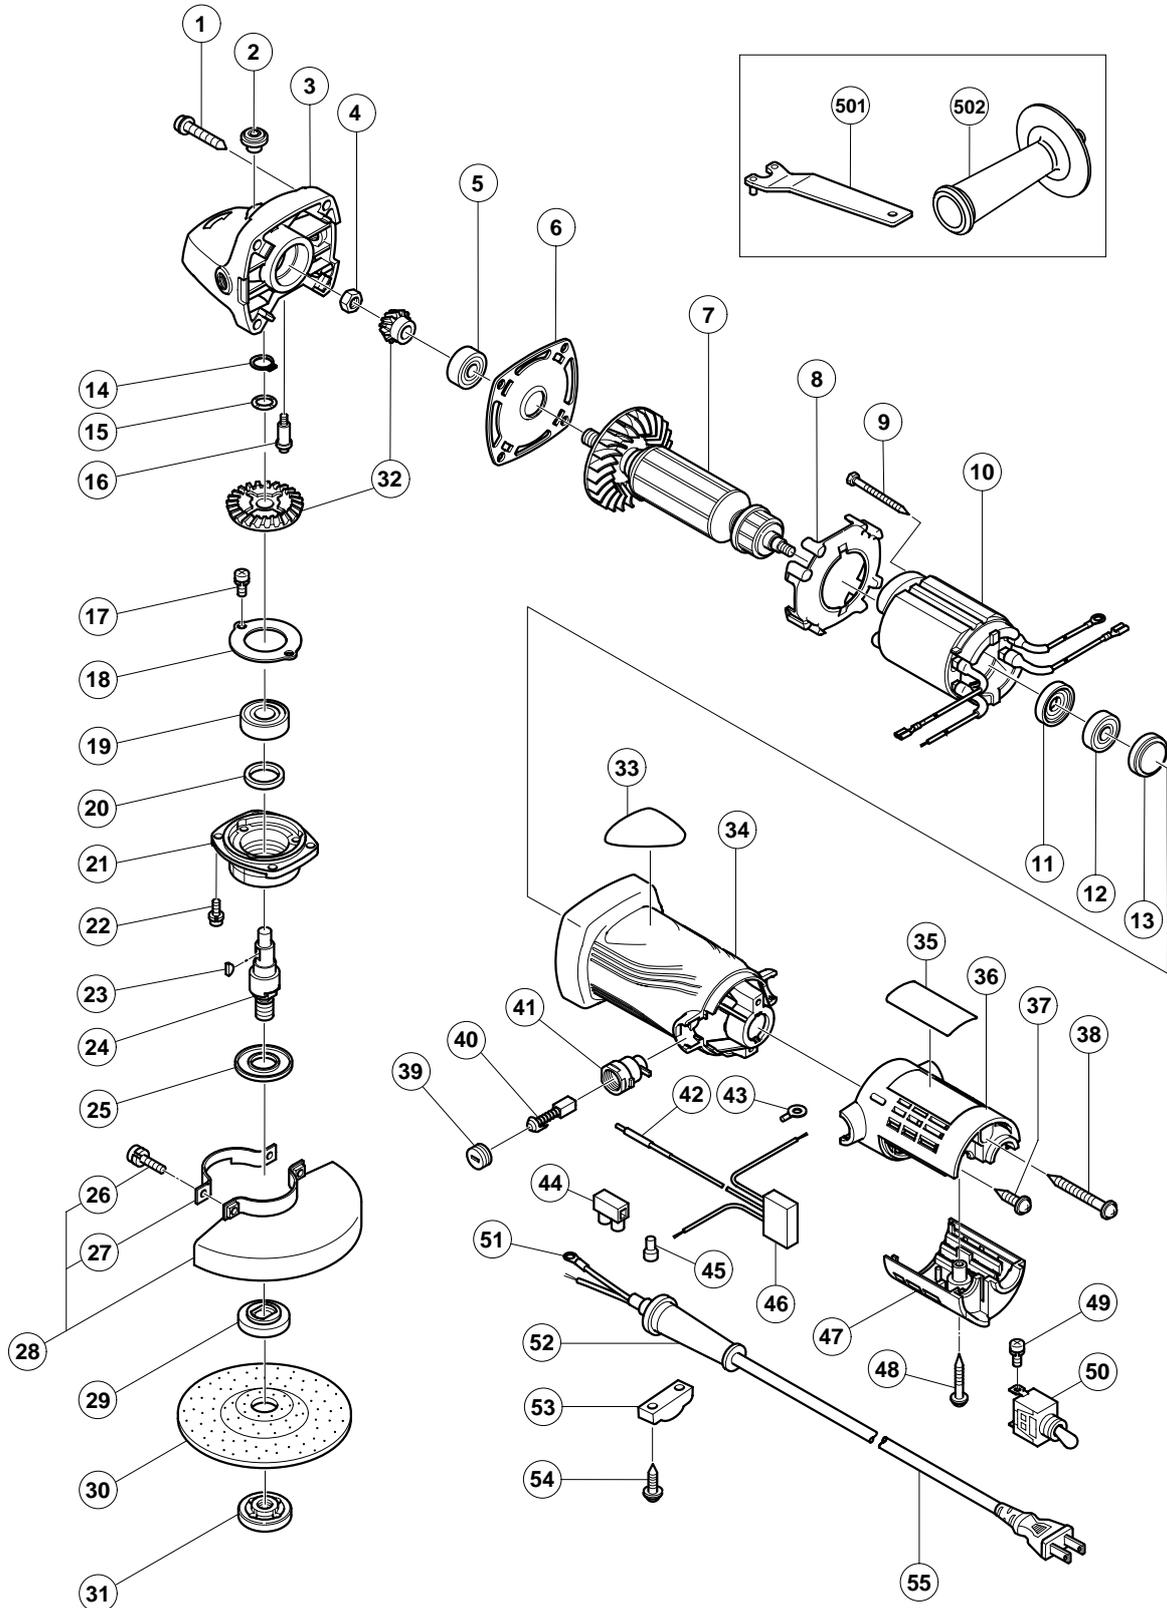

PARTS

G 10SK3

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS
1	320-523	TAPPING SCREW D5X25 (BLACK)	4	
2	301-944	PUSHING BUTTON	1	
3	316-484	GEAR COVER ASS'Y	1	INCLUD. 2, 16
4	301-941	SPECIAL NUT M7	1	
5	628-VVC	BALL BEARING 628VVC2PS2-L	1	
6	316-480	BEARING HOLDER	1	
* 7	360-567C	ARMATURE 110V	1	
* 7	360-567E	ARMATURE 220V-240V	1	
8	319-898	FAN GUIDE	1	
9	319-358	TAPPING SCREW (W/FLANGE) D4X70	2	
* 10	340-514C	STATOR (A) 110V	1	
* 10	340-514E	STATOR (A) 220V-230V	1	
* 10	340-514G	STATOR (A) 220V-230V	1	FOR KOR
11	313-775	DUST SEAL	1	
12	626-VVM	BALL BEARING 626VVC2PS2L	1	
13	319-093	RUBBER BUSHING	1	
14	316-487	RETAINING RING FOR D11 SHAFT	1	
15	316-486	WAVE WASHER	1	
16	301-943	LOCK PIN	1	
17	997-263	SEAL LOCK SCREW (W/SP. WASHER) M4X10	2	
18	316-490	BEARING COVER	1	
19	620-1VV	BALL BEARING 6201VVCMP2L	1	
20	301-946	FELT PACKING	1	
21	316-489	PACKING GLAND	1	
22	307-127	SEAL LOCK SCREW (W/SP. WASHER) M4X12	4	
23	302-047	WOODRUFF KEY	1	
24	316-485	SPINDLE	1	
25	301-945	FRINGER	1	
26	308-386	MACHINE SCREW (W/SP. WASHER) M5X16 (BLACK)	2	
27	301-949	SET PLATE	1	
28	301-948	WHEEL GUARD ASS'Y	1	INCLUD. 26, 27
* 29	320-497	WHEEL WASHER	1	
* 29	320-496	WHEEL WASHER	1	FOR KOR
* 30	316-820	D. C. WHEELS 100MMX4T A36Q (25 PCS.)	1	
* 30	939-640	D. C. WHEELS 100MMX4T A36Q (20 PCS.)	1	FOR KOR
* 31	321-795	WHEEL NUT (C)	1	
* 31	938-062	WHEEL NUT (B)	1	FOR KOR
32	321-450	GEAR AND PINION SET	1	
33		HITACHI LABEL	1	
34	320-666	HOUSING ASS'Y	1	INCLUD. 13
35		NAME PLATE	1	
36	320-668	TAIL COVER (A)	1	
37	302-086	TAPPING SCREW (W/FLANGE) D4X20 (BLACK)	1	
38	306-664	TAPPING SCREW (W/FLANGE) D4X40	1	
39	936-551	BRUSH CAP	2	
40	999-021	CARBON BRUSH (1 PAIR)	2	
41	313-777	BRUSH HOLDER	2	
* 42	314-854	EARTH TERMINAL	1	FOR TPE
* 43	980-063	TERMINAL	1	FOR NOISE SUPPRESSOR
* 44	938-307	PILLAR TERMINAL	1	FOR SIN, MAL
* 45	959-140	CONNECTOR 50091 (10 PCS.)	1	EXCEPT FOR SIN, MAL

