

RATING:

DESIGN PRESSURE	
	(3.102 MPa)
MAX. OPERATING TEMP	120°F
	(49°C)
MIN. OPERATING TEMP	
	(-7°C)
FACTORY TEST PRESSURE	CE / 1.1
TIMES	
	PSIG / 495 PSIG
(4.65 M	Pa) / (3.41 MPa)

QUALIFICATION PRESSURE	1800 PSI
	(12.41 MPa)

INTENDED USE:

The EcoLine 80-450 Non Coded Fiberglass RO Pressure Vessel is designed for continuous, long term use as a housing for reverse osmosis membrane elements to desalt typical brackish waters at pressures up to 450 psi. Any make of eight-inch nominal diameter spiral-wound element is easily accommodated; the appropriate interfacing hardware for the element specified is furnished with the vessel.

The EcoLine 80-450 Non Coded vessel must be installed operated and maintained in accordance with the listed precautions and good industrial practice to assure safe operation over a long service life.

The high performance Filament wound FRP shell must be allowed to expand under pressure; undue restraint at support points or piping connections can cause leaks to develop in the shell. This side-ported vessel requires special precautions in mounting and connection to piping so that the vessel will not be subjected to excessive stress due to bending moments acting at the side openings in the fiberglass shell. The end closure, incorporating close fitting, interlocking metal components, must be kept dry catastrophic mechanical failure of the head.

Pentair will assist the purchaser in determining the suitability of this standard vessel for their specific operating conditions. The final determination however, including evaluation of the standard material of construction for compatibility with the specific corrosive environment, shall be the responsibility of the purchaser. Alternate materials with enhanced corrosion resistance are available on special order.

Specifications are subject to change without notice.

PRECAUTIONS:

- DO...read, understand and follow all instructions; failure to take every precaution will void warranty and may result in vessel failure
- DO...mount the shell on horizontal members at span "S" using compliant vessel supports furnished; tighten hold down straps just snug
- DO...align and center side ports with the manifold header. Correct, causes of misalignment in a row of vessels connected to the same header
- DO...use flexible type grooved-end pipe couplings, Victaulic® Style 77 or equal, at side ports; allow full, 0.125 inch gap between port and piping, and position piping to maximize flexibility of connection.
- DO...provide flexibility in, and support for piping manifolds so that vessel can grow in length under pressure without undue restraint; provide additional flexible joints in large pipes leading to manifold header.
- DO...provide overpressure protection for vessel set at not more than 105% of design pressure
- DO...inspect end closures regularly; replace components that have deteriorated and correct causes of corrosion.
- DO...Lubricate seals Sparingly, Using non petroleum based lubricants, i.e. parker Super 0-lube® Glycerin or suitable silicone based lubricants.
- DO NOT...work on any component until first verifying that pressure is relieved from vessel
- DO NOT...make rigid piping connections to ports or clamp vessel in any way that resists growth of fiberglass shell under pressure;
 - *** Δ DIA = 0.015 in. (0.4mm) and
 - *** $\Delta L = 0.2$ in. (6mm) for a length code -8 vessel
- DO NOT... hang piping manifolds from ports or use vessel in any way to support other components
- DO NOT...tighten Permeate Port connection more than one turn past hand tight
- DO NOT... operate vessel without connecting both Permeate Ports internally to complete set of elements or otherwise plug ports internally so that external piping connection is not subjected to feed pressure
- DO NOT...install Spacer on downstream end of vessel
- DO NOT...operate vessel without Thrust Cone installed downstream
- DO NOT...pressurize vessel until double-checking to verify that the Locking Ring is in place and fully seated.
- DO NOT...operate vessel at pressure and temperature in excess of its rating.
- DO NOT...operate vessel with permeate pressure in excess of 125 psi at 120°F (0.86 Mpa at 49°C)
- DO NOT...tolerate leaks or allow end closures to be routinely wetted in any way
- DO NOT...operate outside the pH range 3-11.

For complete information on proper use of the vessel Please refer to the EcoLine Series USER'S GUIDE_98244

ORDERING:

Using the chart below, please check the features you require and fax them with your purchase order to our customer service department for further processing.

For optional materials and / or feature not listed below, please consult the factory for pricing and availability

VESSEL LENGTH CODE – please check one

MODEL EcoLine 80-450 Non Coded □ -1 □ -2 □ -3 □ -4 □ -5 □ -6 □ -7 □ -8

MEMBRANE BRAND AND MODEL - please check one and fill in information

Please supply adapters for the following membrane brand and specific model

Brand_____Model_____

Membrane brand and model information is not currently available, but will be supplied to Pentair Water on or before the following date. / /

CERTIFICATION REQUIRED

- □ Standard, Certified by Pentair.
- CE Marked.

MATERIAL AND PORT CONFIGURATIONS OPTIONS - please check one

Standard: all materials and port configurations as per drawing 99197 on the previous page NOTE: The options listed below will increase the vessel price. Call factory for pricing details.


FEED PORT CONFIGURATION


Standard $-1\frac{1}{2}$ " IPS pipe, grooved ends, with ports in-line. (1D5D).

Please fill out your feed port configuration in the space below. List port location first, followed by port size for each choice.

Serial number end

PORT SIZE CODE	
D	1 ¹ / ₂ " GROOVED END

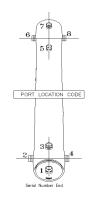

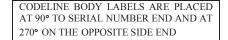



Headquarters: 54/18 Bui Quang La, Ward 12, Go Vap District, HCMC, Viet Nam Office: 12 DHT10B, Dong Hung Thuan Ward, District 12, HCMC, Viet Nam Phone: (028) 6258 5368 - (028) 6291 9568 Email: info@atswatertechnology.com Website: www.atswatertechnology.com