

#### ESW 7020

29 cm high handleless Gourmet warming drawer for preheating crockery, keeping food warm and low temperature cooking.



- The ultimate in enjoyment low temperature cooking
- Always at the right temperature –
   4 functions
- Convenient and easy Touch control
- Opening the drawer couldn't be easier – Push2open
- Better safe than sorry timer function with automatic switch-off

Model and design	
Gourmet warming drawer	•
PureLine	•
VitroLine	•
ArtLine	•
Handleless	•
Colour	Obsidian black
Convenience features	
Pre-heating crockery	•
Keeping food warm	•
Perfect cooking results at low temperature	•
Operating modes	
Cup warming	•
Plate warming	•
Keeping food warm	•
Low temperature cooking	•
User convenience	
Networking with Miele@home	•
Capacity	12 place settings
Push2open mechanism	•
Fully telescopic runners for easy loading and unloading	•
Control panel with sensor controls	•
Control panel with symbols	
Stop programming/Timer function	
Sabbath programme	
Efficiency and sustainability	
Power rating in off mode in W	0.5
Power rating in standby mode in W	1.0
Power rating in networked standby in W	2.0
Time until automatic switch to off mode in min	20
Time until automatic switch to standby in min	_ <del> </del>
Time until automatic switch to networked standby in min	20
Cleaning convenience	_
Flush control panel	·
Safety Cool front	•
Anti-slip mat	_ <del>`</del>
Safety switch-off	•
Technical data	505
Appliance width in mm	595
Appliance height in mm	289
Appliance depth in mm	570
Useable interior height in mm	230
Total rated load in kW	_ 1
Voltage in V	230
Frequency in Hz	50-60
Fuse rating in A	10
Number of phases	1
Length of supply lead in m	2.0

more information: http://www.miele.co.uk/domestic



### ESW 7020

29 cm high handleless Gourmet warming drawer for preheating crockery, keeping food warm and low temperature cooking.




Standard accessories	
Anti-slip mat	1
Rack for increased capacity	1


## Míele

### ESW 7020

29 cm high handleless Gourmet warming drawer for preheating crockery, keeping food warm and low temperature cooking.




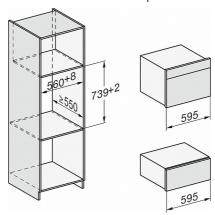


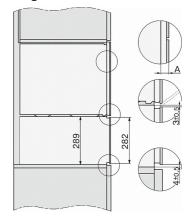

ESW7x20, installation drawings

ESW7x20, DG7xxx, DGM7xxx installation drawings

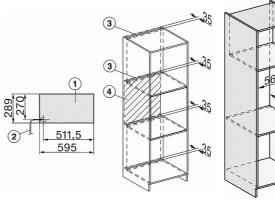


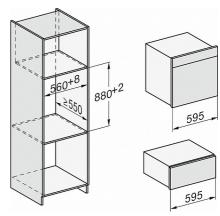


ESW7x20, DGM7x4x installation drawings

- Front view
   Mains connection cable, L=2.000 mm
   Ventilation cut min. 180 cm²
   No connection in this area

ESW7x20, installation drawings

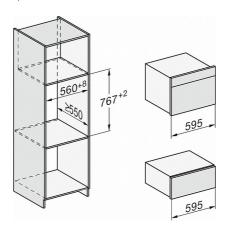

ESW7030, installation drawings

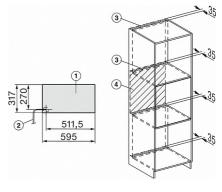

ESW7030 installation drawings


- 1) Front view 2) Mains connection cable, L=2.000 mm


# Míele

### ESW 7020


29 cm high handleless Gourmet warming drawer for preheating crockery, keeping food warm and low temperature cooking.



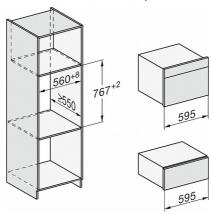

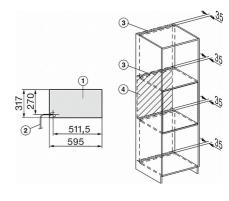

3) Ventilation cut min. 180 cm² 4) No connection in this area

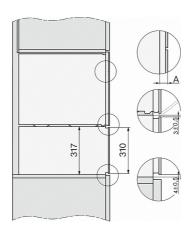

ESW7030, installation drawings
A) 22 mm glass, 23,3 mm stainless steel