

GOOSE ROASTER Manual Instruction

1.Usage:

It is ideal equipment that cook goose, applicable to the guest house, hotel the usage. The high energy, thermodynamic power of product of this series is stable, and the operation is simple, and is an ideal tools and implements that roast.

This series the product choose to use to import the SUS201 stainless steel the manufacturing. have the anti- corrosion, shape beautiful, clean hygiene, burn to have no the black smoke, energy the low etc. advantage of depletion, and is a roasting of environmental protection equipments.



2. main technique data:

	Spec		LPG			Heat	weight	Gas
MODEL	Diameter	high	Heat	Pressure	Gas consumption			pipe dia
	φ	Н	Kcal/ M ³	Pa	M ³ /set / h	Kcal/set	Kg	
GR-22A	800	1400	23000	2800	1.09	25000	40	1.5
GR-22B	900	1500	23000	2800	1.09	25000	40	1.5

3. usage notes

- 1. Before operation, please check the gas and the operation pressure to see if they meet the requirement. .
- 2. The operation environment should be good air facilitation. It is better to install smoke hood and ventilation device on the above of wok to get rid of the exhaustive gas and smoke.
- 3. After installation, please check and be sure all of the connections have no leakages.
- 4. If you find any leakages, you should shut off the natural gas for inspection. Before ventilate the gas indoor, never make any ignition or turn on the electric appliances to avoid accidence.
- 5. The point fire is in proper order:Slowly open the Ignition Valve, and use the long point firearms to order the fire the empress, and slowly open the main gas valve again, absoluteness must not open the main gas valve first to order the fire again, in order to prevent trouble occurrence.

- 6. When the cooking stove work, operation cannot leave the spot, in order to prevent the occurrence a fire.
- 7. While stop the usage, must close the main gas valve, then close the Ignition Valve, then pass fire stick of long point.
- 8 cooking stove should usually clean, then keep the hygiene, beautiful and good usage appearance.

4. Operation method:

- 1,Confirm the door of each valve to be placed in to close the appearance first, and open again to provide the gas valve the switch.
- 2,Spark the material for new fire, and open the switch of main fire valve, and treat to catch fire to spark, and the flames flush, regulate the valve door to make the flames become the blue.
- 3,When the pause use, can close the main fire, and often keep clear material for new fire, such as be in use again to should press operation method(2) operation.
- 4,The usage completes, and close first to provide the gas valve the door, and need the remaining gas to burn the over empress, and can just leave.
- 5, Should periodical clean coke in the burner.