



VINAHARDWARE IMEX., JSC

Manufacturer's address: 952A HUYNH VAN LUY, QUARTER 7, PHU MY WARD, THU DAU MOT CITY, BINH DUONG PROVINCE


Date of manufacture:

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended

When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or dimbing. We recommend mounting this restraint a wall stud.

Parts included

- ✓ A (2) Plastic Bracket
- ✓ B (1) Restraint Strap
- ✓ C (2) Screws M4x30mm
- ✓ D (2) Screws M4x20mm
- ✓ E (2) Plastic Anchor

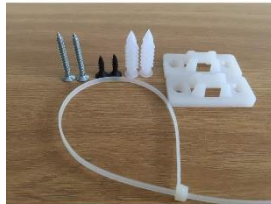

Assembly Instructions

Place two of the plastic Brackets (A) near the top back edge of the furniture, Insert the Short Screw (D) and tighten with a Screwdriver (not provide)

Determine the final location of the unit. Mark locations on the wall approximately 2 inches below the Plastic Brackets (A) installed on the back of the unit, and attach second set of brackets (A) to wall using Long screws (C).

Lace one end of the Restraint Strap (B) down through each Plastic Bracket (A). Bring both ends together and slide the beaded end until it locks into the keyhole slot as shown in the sketch.



CÔNG TY CỔ PHẦN SẢN XUẤT XUẤT NHẬP KHẨU VINAHARDWARE

Địa chỉ: 952A Huỳnh Văn Lũy, Khu Phố 7, Phường Phú Mỹ, Thành Phố Thủ Dầu Một, Tỉnh Bình Dương, Việt Nam.

Thời gian sản xuất:

Trong quá trình sử dụng hoặc chơi đùa, trẻ em hay trèo, đu trên học, kệ tủ... Khi được lắp đặt đúng cách, bộ phụ kiện này có thể bảo vệ đồ đạc khỏi bị lật đổ bất ngờ, đảm bảo an toàn cho trẻ em và người sử dụng.

Một bộ phụ kiện bao gồm:

- ✓ A1 & A2: (2) Pat nhựa chống lật
- ✓ B: (1) Dây đai an toàn
- ✓ C: (2) Vít M4x30mm
- ✓ D: (2) Vít M4x20mm
- ✓ E: (2) Tắc kê nhựa



Hướng dẫn lắp ráp

1. Đặt một cái Pat nhựa chống lật (A1) ở phía sau của đồ nội thất, Lắp Vít ngắn (D) để cố định Pat vào đồ nội thất.

2. Pat chống lật còn lại (A2) sẽ được cố định trên tường, tại vị trí song song với Pat nhựa (A1) bằng các thao tác:

- Xác định vị trí sẽ lắp Pat chống lật trên tường và đánh dấu các vị trí đó. Sau đó dùng khoan, khoan 2 lỗ tại vị trí đã đánh dấu và lắp 2 cái tắc kê nhựa (E) vào lỗ khoan.

- Đặt Pat chống lật (A2) vị trí đã lắp tắc kê nhựa (E), và lắp Vít dài (C) cố định Pat vào tường.

3. Sau khi cố định 2 Pat chống lật, sẽ đến thao tác luồn một đầu của Dây đai an toàn (B) qua cả hai Pat chống lật (A1) và (A2), sau đó điều chỉnh đến kích thước mà mình mong muốn.

