


# Scotsman®

## USE AND ORDINARY MAINTENANCE

DICE

NU | NW SERIES



Dear Customer,


this manual contains all the information necessary for the use and routine maintenance of the product.

We therefore recommend that you read it carefully before use and keep it carefully for future reference.

If any step is not understood well, the Manufacturer remains available to provide any information.



Safety	p. 4
Knowing the appliance	p. 8
Using the appliance	p. 12
Cleaning and maintenance of the appliance	p. 14
Service	p. 16

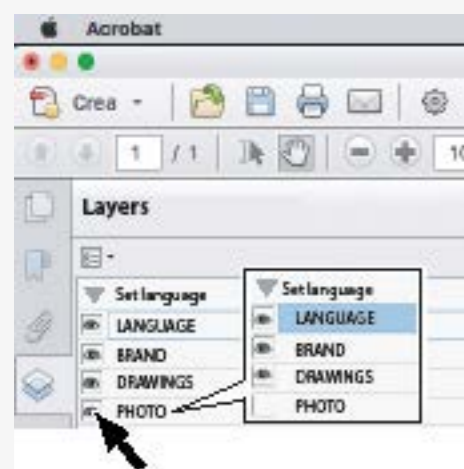

This booklet in digital format is interactive; for example, a simple “click” of the mouse on the writings or on the page numbers gives direct access to the contents indicated.

If you need to print the booklet, it is advisable to deactivate the “Photo” level from the Acrobat menu.

Drawings and texts will be printed but the background photos will be hidden: in this way it will be possible to save a lot of printing ink and, consequently, protect the environment!

EUROPE, MIDDLE EAST & AFRICA  
Scotsman Ice S.r.l.  
Via Lainate, 31 - 20005 Pogliano Milanese (MI) - ITALY  
Phone: +39 02 93960208  
Fax: +39 02 93960201  
sales@scotsman.it  
www.scotsman-ice.it

ASIA PACIFIC  
Scotsman Industries Singapore Pte Ltd  
140 Paya Lebar Road Singapore 409015  
Phone: +65 67385393  
Fax: +65 67381959  
scotsmange@scotsman.com.sg  
www.scotsman-ice.it

斯科茨曼制冰系统(上海)有限公司  
Scotsman Ice Systems (Shanghai) Co., Ltd.

Address (地址)  
Room 2506, Building 2, No 20 Xuhong Middle Rd.  
Shanghai, China, 200235  
中国上海徐汇区徐虹中路20号2号楼2506室 (200235)







Phone: (电话): 0086-21-61313200  
Fax: (传真): 0086-21-61313330  
Hotline (热线): 0086-4006300076  
E-Mail: sales@scotsman-china.com  
Website: www.scotsman-china.com

For any information, always state:

- product model
- serial number
- data in the purchase invoice

# SAFETY

## Pictogram explanation

-  Indicates that caution is required when performing an operation described in a paragraph that bears this symbol. The symbol also indicates that maximum operator awareness is required in order to avoid unwanted or dangerous consequences
-  Indicates important information to be read and complied with.
-  Indicates requirements relating to actions that must be avoided.
-  This symbol placed on the appliance or used in the manual identifies the areas with an electrical hazard.
-  Indicates grounding
-  Indicates that it is necessary to read carefully the paragraph marked with this symbol before installing, using and maintaining the product

## Safety warnings

### WHO IS THIS MANUAL FOR?

The pages identified with this symbol are mainly addressed to the user, who must read them carefully before use and routine maintenance (cleaning) of the appliance.

If you have not understood the whole content of the manual, contact your local distributor or Dealer before working on the appliance.

Given the continuous progress in the design sector, the Manufacturer reserves the right to make changes to the production and instructions, without this entailing the obligation to update the production and previous instructions. If necessary, further copies or updates of these instructions must be requested from the Manufacturer.

### INTENDED USE AND CLASSIFICATION


This appliance is an ice maker and must only be used for making ice (not as a container for bottles, cans, etc.)


-  The appliance is designed to be used in domestic and similar applications such as:
  - the kitchen area for staff in shops, offices and other work environments;
  - farms and by customers in hotels, motels and other residential-type environments;
  - bed and breakfasts;
  - catering services and similar applications, not for retail.


## OPERATING LIMITS


	Minimum	Maximum
Working temp.	10°C	43°C
Water temperature	5°C	38°C
Water pressure	0.1 MPa 1 Bar	0.5 Mpa 5 Bar
Voltage tolerance with respect to the data indicated on the plate	-10%	+10%
Sound level produced by the operation of the appliance	< 70 dB(A)	


## GENERAL WARNINGS


 Partial or total non-compliance with these instructions and following prescriptions, improper installation, use, ordinary or extraordinary maintenance or other than those indicated in the manual or the tampering with or modification of the appliance or some of its parts (unless expressly authorized), use of non-original or non-specific spare parts for the model, unauthorized interventions:


- can cause damage, injury or death;
  - void the warranty
  - reduce or compromise the quality and safety characteristics of the appliance;
  - release the Manufacturer from any liability.
-  It is absolutely forbidden to tamper with or remove the adopted safety devices (protective grids, danger stickers, etc.). The Manufacturer declines all responsibility if the above instructions are not complied with.


 Use or routine maintenance (cleaning) other than those mentioned in the Manual may cause damage, injury or fatal accidents.


 This appliance can be used by children aged 8 and over and by people with reduced physical, sensory or mental abilities or with a lack of experience and knowledge only if they have been adequately instructed and supervised in the safe use of the appliance and have learned the possible dangers derived from its use. Children must be supervised to make sure they do not play with the appliance.


 If the power cable is damaged, have it replaced **ONLY** by QUALIFIED PERSONNEL in order to prevent any risks.


 Before carrying out any routine cleaning or extraordinary maintenance, it is necessary to disconnect the appliance from the power supply, close the water tap and wear suitable personal protective equipment (e.g. gloves, etc.).


 If the appliance does not work or functional or structural alterations are noted, disconnect it from the power and water mains (if provided) and contact a service centre authorised by the Manufacturer without attempting to repair it on your own. The use of original spare parts is mandatory. The Manufacturer accepts no liability for the use of non-original spare parts.

 If the appliance is being repaired, highlight with appropriate signs placed in a visible position that it CANNOT be used.


 Do not place objects that cause poor ventilation on and around the appliance. In particular, make sure that the front and/or side ventilation openings are always free from obstructions.


 Do not store explosive substances in this appliance, such as aerosol cans with flammable propellant.


 Do not use electrical devices inside the application container, unless they are of the type recommended by the Manufacturer.


 Do not place any solid or liquid object on top of the appliance and do not use it as an anchor.

 Do not sit on top of the appliance.


 Do not work on the appliance with wet hands or bare feet.


 For small movements of the appliance, it must always be lifted. NEVER push or drag it.


 The rating plate provides important technical information that is vital in case of a request for maintenance or repair of the appliance: please do not remove, damage or modify it.


 To ensure the best conditions of use and safety of the appliance, once or twice a year (or according to the provisions of the national regulations in force) contact the Dealer or the local distributor to have the appliance checked so that it undergoes extraordinary maintenance (washing, descaling and sanitizing the water


circuit and replacing the XSafe lamp - if any). The Manufacturer's warranty does not cover oxidation due to installations in marine environments or in the presence of salt.

 The state of the appliance stopped, detected by means of a visual inspection of the same, does not guarantee with certainty that the device is turned off. In order to protect his own safety, the operator must check that the machine is not powered, that is, that its plug is disconnected or that the switch of the panel to which it is connected is in the "OFF" position.

 This manual is an integral part of the appliance and must accompany it throughout its useful life. Store the manual carefully, in a dry and accessible place, near the location of the device for any further future consultation by the various operators when they need it.


 The appliance must be easily moved for any extraordinary maintenance: pay attention that any masonry work subsequent to installation (e.g. construction of walls, replacement of doors with narrower ones, renovations, etc.) do not hinder movement.


 Caution! Do not install the machine on containers with an area smaller than the base of the appliance.


 When cleaning any part or accessory do NOT use:

- abrasive or powder detergents;
- aggressive or corrosive detergents (e.g. hydrochloric or sulphuric acid, caustic soda, etc.). Caution! Never use these substances also when cleaning the floor under the appliance;
- abrasive or sharp tools (e.g. abrasive sponges, scrapers, steel brushes, etc.);
- steamed or pressurised water jets.

## INSTALLATION INSTRUCTIONS

 Installation must be performed by authorized technicians.

 At the installation, replace the existing water supply tubes with the new ones supplied with the appliance

 Place the water drain hose(s) supplied in the relative drain.

 Attention, use only drinking water.

⚠ The water supply tap must be within reach of the operator.

The installation of a softener filter for the water connection is recommended. For the installation, contact your local official distributor.

⚠ Before installation and periodically during use, check that the power cable is not torn or damaged.

⚠ If the power cable is damaged, have it replaced **ONLY** by **QUALIFIED PERSONNEL** in order to prevent any risks.

⚠ It is mandatory to connect the appliance to a wall switch installed on the power line.

⚠ Do not place multiple sockets or portable sockets behind the application.

⚠ The main switch and/or the electrical outlet must be close to the appliance and within reach of the operator.

⚠ During the installation, check that:

- the socket of the power supply line is earthed.
- the contact opening distance allows complete disconnection in the conditions of category III overvoltage. Disconnection devices must be incorporated into the power supply in compliance with the installation rules.
- the appliance has a minimum distance of 150 mm from the walls to allow sufficient ventilation;
- the appliance is perfectly level.

#### REFRIGERANT GAS SAFETY WARNINGS

⚠ Propane is a highly flammable gas.

● The appliance contains fluorinated greenhouse gases governed by the Kyoto protocol, in the quantities indicated on the serial plate.

● The GWP (Global Warming Potential) of:

- HFC R404A is 3750;
- HFC R452A is 2140;
- HFC RE134A is 1430;
- R290 is 3.

The propane used in refrigeration systems is odourless and heavier than air; in case of refrigerant leaks it migrates to the ground.

● The system is hermetically sealed.



## KNOWING THE APPLIANCE

Before using the appliance it is good to know it thoroughly. This appliance is an ice maker and must only be used to make ice (not as a container for bottles, cans, etc.)

**F01** This booklet explains the operation of different devices; to identify the purchased model, look for its name on the serial plate, located on the back of the appliance ("model" field).


**F03** NW series models should be installed on top of a separate ice bin; an outlet kit is available as an option to be able to unload onto a conveyor belt or a low container on wheels placed on the side or rear.

**F02** NU series models have a built-in ice container.

To avoid possible cold injuries, remove the granular ice using scoop "G" (supplied with the models with built-in ice container) and PPE devices, such as gloves (not supplied).

Air filter "C", if present, must be inspected and cleaned periodically; for the removal operations and cleaning methods see **F11** on page 15.


Never obstruct front and side ventilation slots "D", they are used to ensure the correct operation of the internal cooling unit.

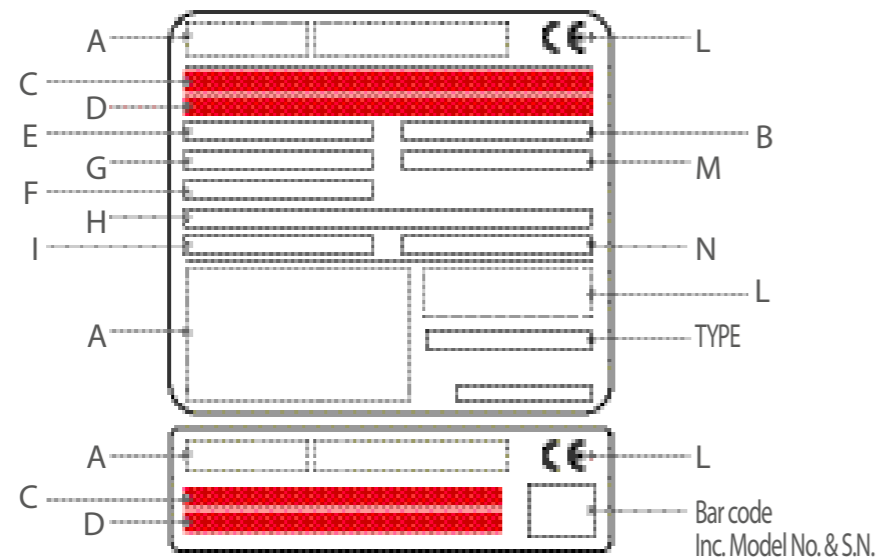

- A Manufacturer details
- B Frequency
- C Model
- D Serial number
- E Supply voltage
- F Climate class
- G Current intensity
- H Refrigerant data
- I Net weight
- L Certifications
- M Insulating material
- N Production date


F01

series  
NU 100|150|220|300 NU 100|150|220|300

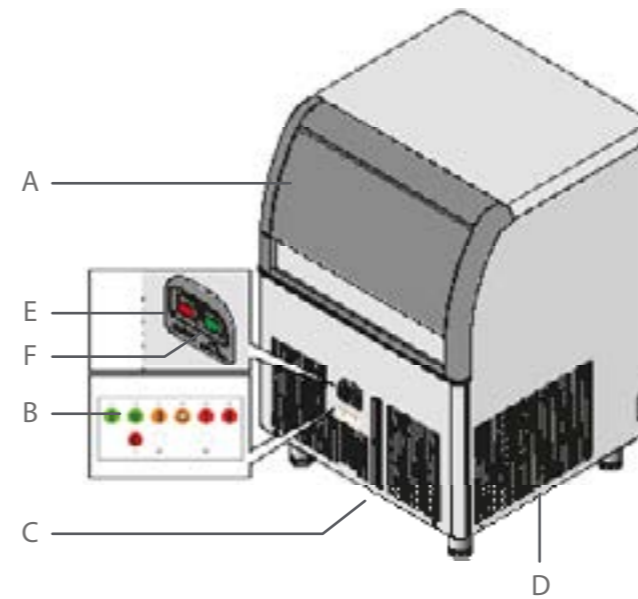

F02

series  
NW 307|308|457|458|507|508|608|1008|1408

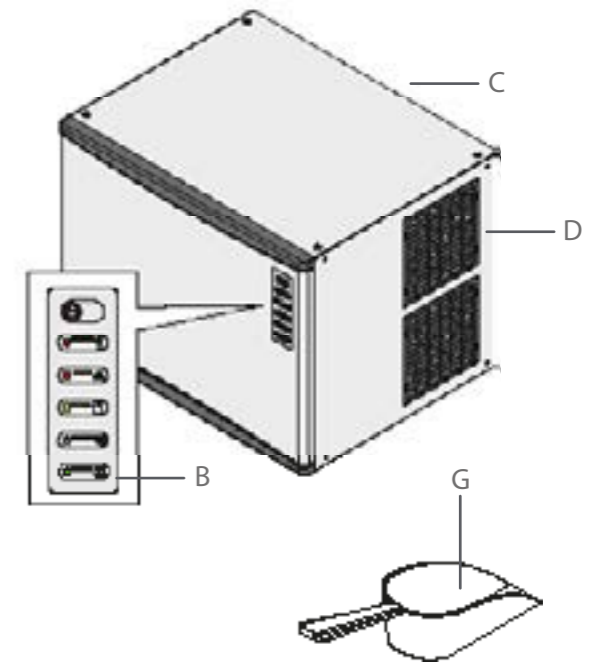

F03

### KEY

- A Ice container door
- B Warning lights (see page 10 for further explanations)
- C Air filter (if present)
- D Front and side air vents
- E Red key CLEAN (if present)
- F ON/OFF green button (see page 10 for further clarifications)
- G Scoop (supplied with models with built-in ice container)

## UV AND OZONE LAMP (only for Xsafe models)

**F04** This natural sanitization system based on the UV lamp is built into the appliance and guarantees absolute purity and hygiene:

- treats the air with ozone technology in the food area of the ice maker;
- keeps the ice maker and the container clean, reduces mould, viruses and other microorganisms;
- it is fully automated and chemical free.


This system requires an annual maintenance program to maintain its effectiveness and replace the UV lamp. The replacement of the UV lamp CANNOT be carried out by the user, contact a specialized technician. Please contact your local distributor or Dealer for an annual maintenance plan.

## KNOWING THE BUTTONS AND LIGHTS

**F05** **F06** The "F" ON/OFF green button (if present) turns the appliance on and starts ice production. Attention, even if the button is off, the appliance is still powered; to turn it off, for example to carry out cleaning or at the end of the working day, set the main system switch to OFF or remove its plug from the socket.

Indicator lights "B" give useful information on the status of the machine.

NU	NW	
		electrically powered appliance
		the appliance is making ice
	-	the appliance is unloading ice
		full ice container
		alarm (see chap. Problems and solutions on page 17)
LED CLEAN	-	if on, it indicates that cleaning is in progress
R	R	RESET button; This button has two functions: <ul style="list-style-type: none"> <li>• carries out a reset after any alarm;</li> <li>• With the machine running, it allows you to pass from one operating phase to the next (Start - automatic cleaning - pressure adjustment - freezing - collection - full container).</li> </ul>

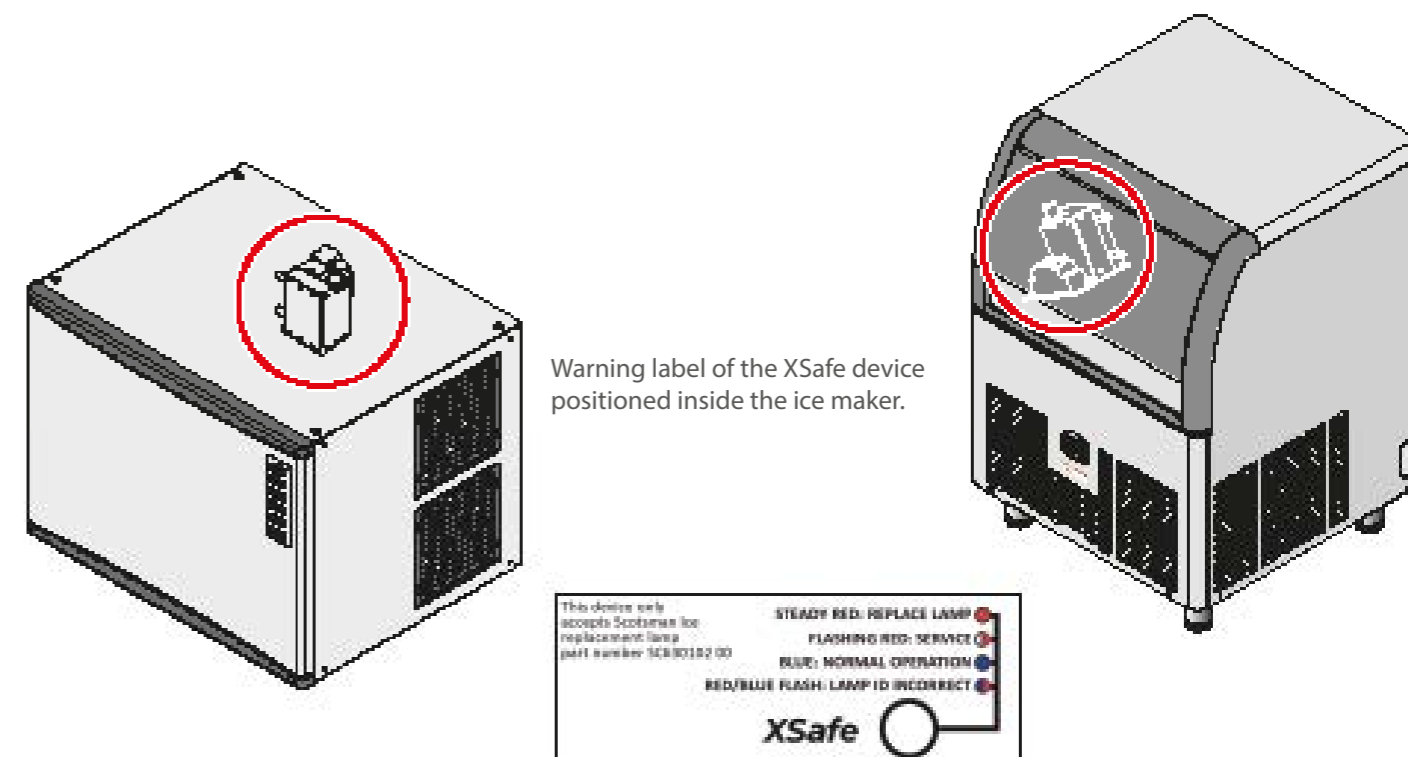


Warning label of the XSafe device positioned inside the ice maker.


F04

NU series  
Granular ice maker with built-in ice container

NW series  
Granular ice maker without built-in ice container

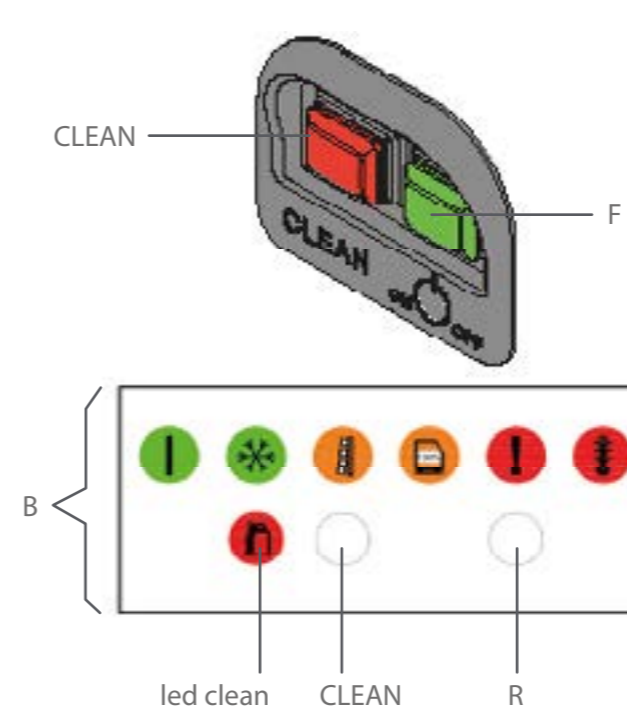

F05

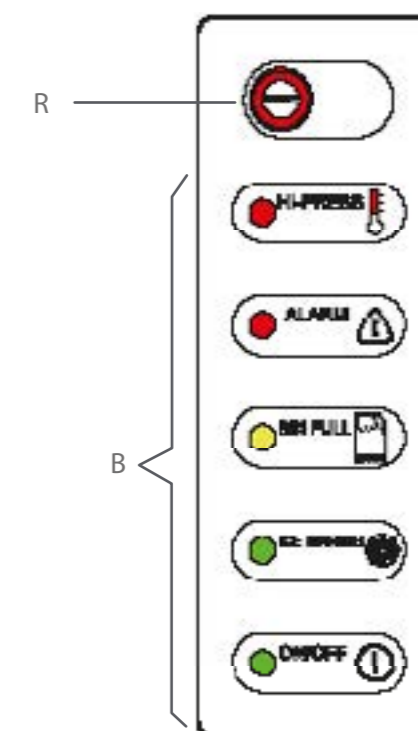

F06

## USING THE APPLIANCE


This appliance can be used by children aged 8 and over and by people with reduced physical, sensory or mental abilities or with a lack of experience and knowledge only if they have been adequately instructed and supervised in the safe use of the appliance and have learned the possible dangers derived from its use.

### F07 Starting the appliance

- 1 Power the appliance inserting its plug into a socket with adequate capacity and turning the switch that powers the socket to ON or, if the appliance has been connected to an electrical panel, set the main switch of the panel to ON: the appliance is now powered up.
- 2 Open the water supply tap so that it can be filled from the appliance.

### F07 Ice production start

- 3 Press the green ON/OFF key (if present in your model). In models without the green ON/OFF button, no operation is required. The green light "appliance powered" turns on.
- 4 The appliance starts loading water automatically. Once filling has been completed, the appliance waits for a delay at the start of 3 or 90 minutes (depending on the model) before starting ice production.

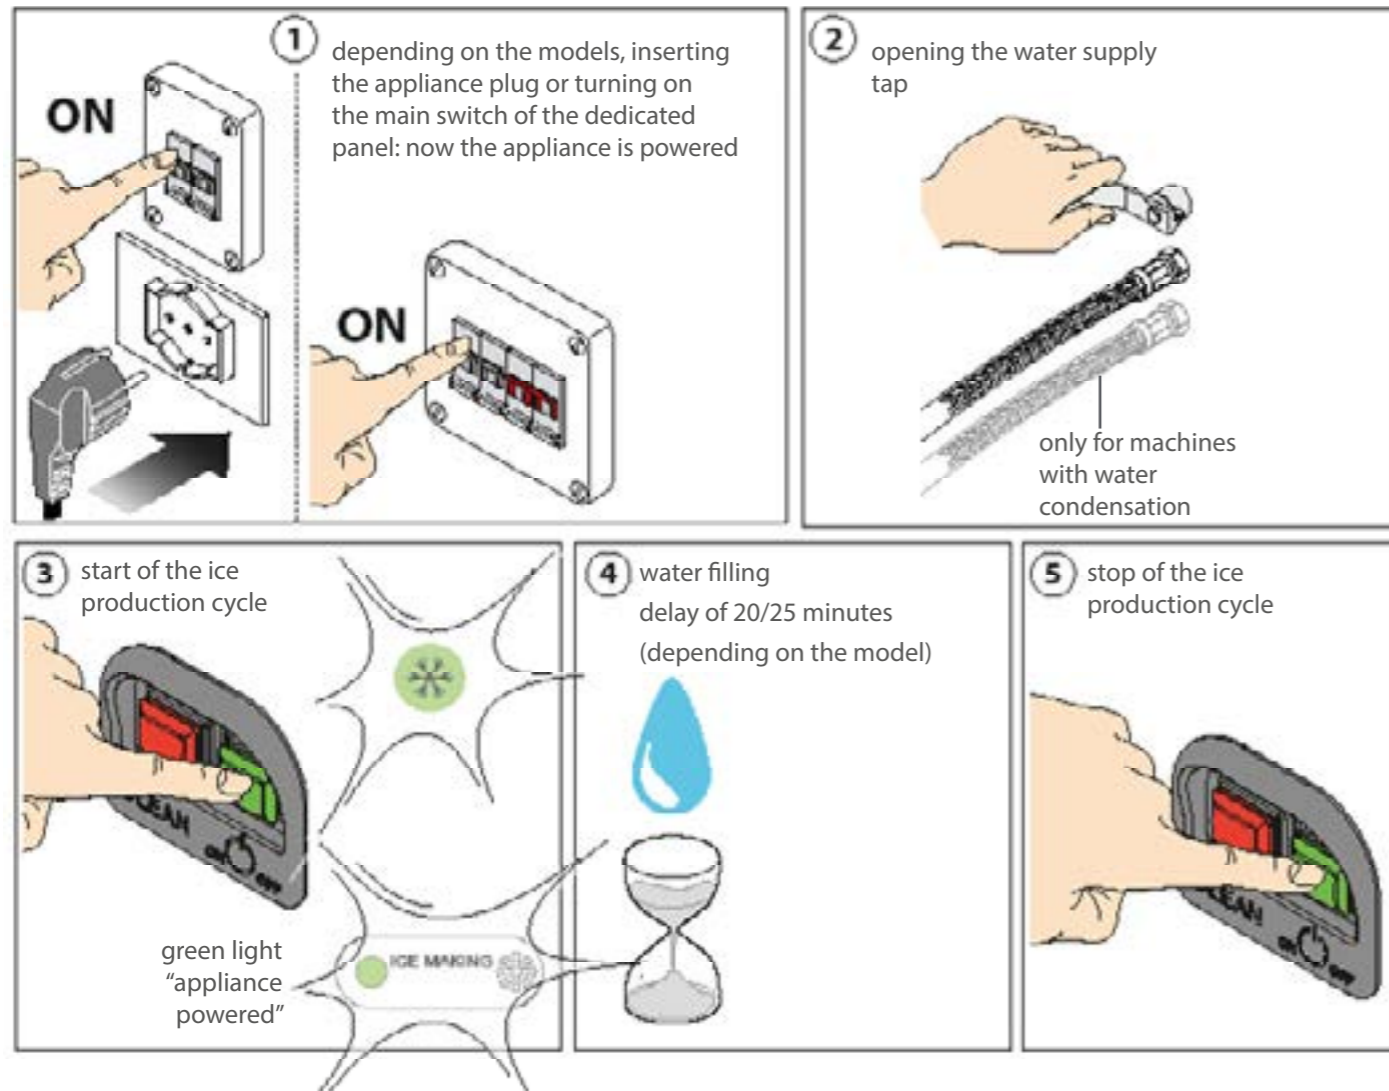

F07

F08 After a few minutes the first ice will be released which can then be removed from the container using the scoop provided. Then, more ice will be released, until the container is filled, without the need to press any button.

- To avoid overfilling the built-in container and possible leakage of the ice, inside the container there is a sensor that stops production if the maximum capacity level is exceeded; when the "container full" light comes on, the ice container is full and ice production is temporarily interrupted. When the ice is removed and the level is lowered, the "container full" light goes off and the appliance automatically resumes production without the operator needing to intervene in any way.


### F07 Ice production stop

- 5 To stop ice production, press the green ON/OFF key (if present). In models without the ON/OFF green button, to stop production, unplug the appliance or turn off the switch that powers the socket or the electrical panel to which the appliance is connected.

⚠ Even if the ON/OFF key is off, the appliance is still powered up.

## Turning the appliance off

To turn the appliance off, for example to carry out cleaning or at the end of the working day, unplug the appliance or turn off the switch that powers the socket or the electrical panel to which the appliance is connected.

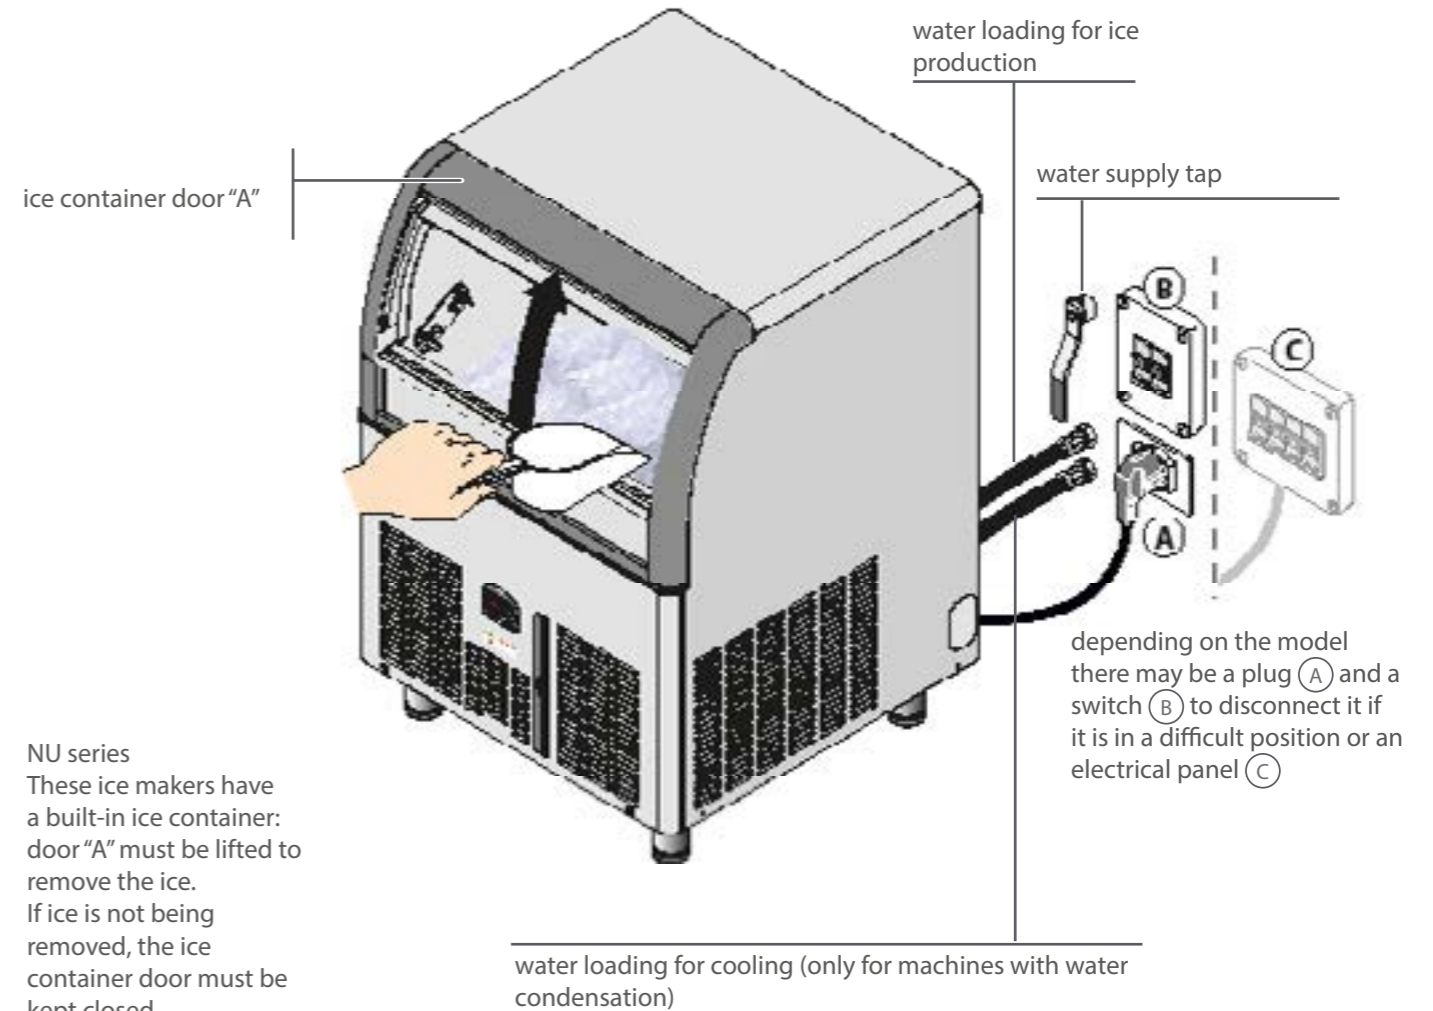

NU series  
These ice makers have a built-in ice container: door "A" must be lifted to remove the ice. If ice is not being removed, the ice container door must be kept closed.

F08

# CLEANING AND MAINTENANCE OF THE APPLIANCE

## Ordinary cleaning

**⚠** Before carrying out any ordinary or extraordinary maintenance, it is necessary to disconnect the appliance from the power supply, close the water supply tap and wear appropriate personal protective equipment (e.g. gloves, etc...).

Ordinary cleaning is intended to keep the appliance in good operating condition and prevent the proliferation of bacteria.

To clean any component or accessory DO NOT use:

- abrasive or powder detergents;
- aggressive or corrosive detergents (e.g. hydrochloric or sulphuric acid, caustic soda, etc.). Caution! Never use these substances also when cleaning the floor under the appliance;
- abrasive or sharp tools (e.g. abrasive sponges, scrapers, steel brushes, etc.);
- steamed or pressurised water jets.

The user must carry out only routine maintenance, for any extraordinary maintenance, contact a Service Centre requesting service from an authorised technician.

The cleaning of the appliance is reserved only for suitable and capable personnel and must not be carried out by children.

### DAILY

Clean the ice scoop with the manufacturer's disinfectant mixed with warm water (1 ml in 1 litre of water, the dilution percentages are also indicated on the rear label of the product). Finish rinsing and drying it thoroughly.


### MONTHLY

Clean the ice collection compartment with a soft cloth soaked with the manufacturer's disinfectant mixed with warm water (1 ml in 1 litre of water, the dilution percentages are also indicated on the rear label of the product). Finish with a thorough rinsing.

Clean the external surfaces with a soft cloth moistened with a specific product for stainless steel, free of acid, aggressive or abrasive agents. For how to use it, refer to the instructions provided by the manufacturer of the chosen detergent.



The manufacturer's disinfectant is the only one tested and guaranteed to thoroughly sanitize all surfaces in contact with the ice, in full compliance with the construction materials. Contact the official local Manufacturer/Distributor for any purchase.

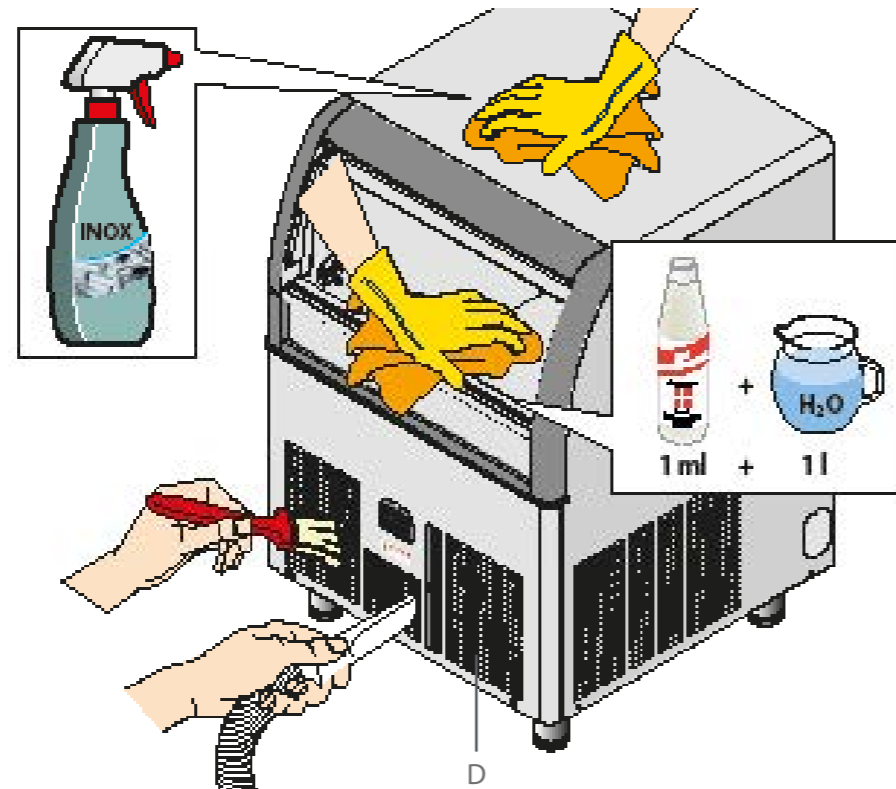

F09


F10

**F10** Clean the front or side "D" air vents with a soft bristle brush or vacuum cleaner.

**F11** Remove air filter "C" (if present), wash it with warm water and soap, rinse it thoroughly and reposition it only after it has completely dried.

Clean the control panel and the door with a soft cloth slightly moistened with a neutral detergent suitable for delicate surfaces. For how to use it, refer to the instructions provided by the manufacturer of the chosen detergent.

Filter "C" is present only in air-cooled machines

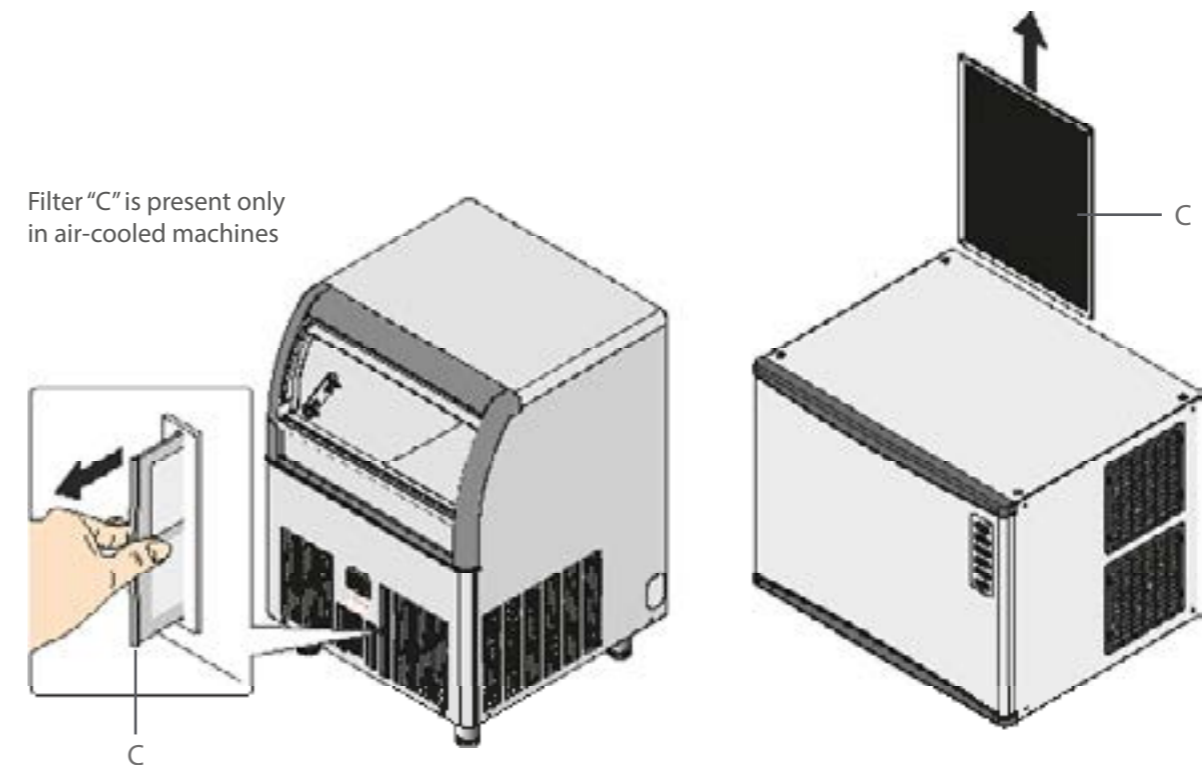

F11

### EVERY 6 MONTHS / 1 YEAR

Contact the official local Dealer/Distributor for washing, descaling and sanitizing the water circuit.

### EVERY YEAR

Contact your official local Dealer/Distributor for the annual maintenance plan and XSafe lamp replacement.

**⚠** Proper and timely maintenance is essential to ensure health safety and maintain excellent performance of the appliance over time.



## Downtime

During any downtime, switch the power and water off.

Before resuming operations:

- accurately clean the appliance and accessories (if present);
- submit the appliance to the water circuit check and cleaning;
- reconnect the appliance to the power and water supply.

## Extraordinary maintenance

Extraordinary maintenance, such as the replacement of a faulty component, must only be performed by qualified personnel authorized by the Manufacturer. The Manufacturer accepts no liability and does not recognize the warranty if the user independently carries out or has unqualified personnel carry out extraordinary maintenance.

## End of life disposal



Implementing Directives 2011/65/EU and 2012/19/EU on the disposal of waste electrical and electronic equipment.

The crossed-out bin symbol indicates that the product at the end of its useful life must

be collected separately from other waste. The separate collection of this appliance at the end of its life is organized and managed by the manufacturer. The user who wants to get rid of this appliance must then contact the manufacturer and follow the system that he has adopted to allow the separate collection of the appliance that has reached the end of its life.

Adequate separate collection for the subsequent start-up of the decommissioned appliance for recycling, treatment and environmentally compatible disposal helps to avoid possible negative effects on the environment and health and favours the recycling of the materials of which the appliance is made.

Illegal disposal of the product by the holder involves the application of administrative penalties provided for by the current legislation.

## SERVICE

Your appliance is reliable and sturdy but sometimes small problems may arise that, thanks to our service centres, are quickly resolved.

Before contacting them:

- try and refer to the following tables;
- get the model and serial number of the appliance, both of which can be found on the serial number plate on the back of the appliance (see **F01** page 8)
- find the purchase invoice for the appliance.

If there is a need to replace faulty parts, keep them and entrust them to the installer in charge for replacement so that they can be sent to the Manufacturer for the necessary checks.

Do not attempt to repair the appliance on your own: this could cause serious damages to people, animals and property and voids the Warranty.

Always request service by a service centre authorised by the manufacturer and request ORIGINAL spare parts.

Model: \_\_\_\_\_

Serial number: \_\_\_\_\_

Manufacturer:

EUROPE, MIDDLE EAST & AFRICA  
Scotsman Ice S.r.l.  
Via Lainate, 31 - 20006 Pogliano Milanese (MI) - ITALY  
Phone: +39 02 93960200  
Fax: +39 02 93960201  
sales@scotsman.it  
www.scotsman-ice.it

ASIA PACIFIC  
Scotsman Industries Singapore Pte Ltd  
140 Paya Lebar Road Singapore 409016  
Phone: +65 67386393  
Fax: +65 67381959  
scotsman@scotsman.com.sg  
www.scotsman-ice.it


斯科曼製冰系統(上海)有限公司  
Scotsman Ice Systems (Shanghai) Co., Ltd.

Address (地址)  
Room 2506, Building 2, No 20 Xuhong Middle Rd.  
Shanghai, China, 200235  
中國上海徐匯區徐匯中路20號2506室 (200235)







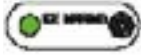






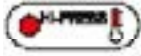




Phone: (中國) : 0086-21-61313200  
Fax: (傳真) : 0086-21-61313330  
Hotline (熱線) : 0086-4006300076  
E-Mail: sales@scotsman-china.com  
Website: www.scotsman-china.com

## Problems and solutions

PROBLEM	SOLUTION
The appliance does not switch on	<ul style="list-style-type: none"> <li>• Check that there is no black-out, that the main switch of the dedicated panel has not blown and that the plug is correctly inserted in the socket.</li> </ul> <p>If none of these solutions solves the problem, contact Technical Assistance.</p>
The appliance makes no ice or production is limited.	<ul style="list-style-type: none"> <li>• Check that the appliance is not near another very hot one (e.g. oven).</li> <li>• Check that ambient temperatures do not exceed 43°C.</li> <li>• Check that the water supply tap is open (see <b>F08</b> on page 13).</li> <li>• Check that air filter "C" (if present) is not clogged, if necessary clean it (see <b>F11</b> page 15).</li> <li>• Check that front or side air vents "D" are not obstructed by objects or dust (see <b>F10</b> on page 14). Switch the appliance off and back on.</li> </ul> <p>If none of these solutions solves the problem, contact Technical Assistance.</p>
The appliance is very noisy	<ul style="list-style-type: none"> <li>• Check the appliance touches no other apparatus, object or machine.</li> <li>• Check the appliance is perfectly level.</li> <li>• Check that all visible screws are properly tightened.</li> </ul> <p>If none of these solutions solves the problem, contact Technical Assistance.</p>
The red alarm light comes on	<p>If it is on STEADY:</p> <ul style="list-style-type: none"> <li>• It indicates an alarm due to excessive temperature of the cooling condenser: check that the appliance is not close to another very hot one (e.g. oven) or that the ambient temperatures do not exceed 43°C.</li> <li>• Check that air filter "C" (if present) is not clogged, if necessary clean it (see <b>F11</b> on page 15).</li> <li>• Check that the inlet water pressure is between 1 Bar and 5 Bar.</li> </ul> <p>If none of these solutions solves the problem, contact Technical Assistance.</p>
The red alarm light comes on	<p>If on FLASHING:</p> <ul style="list-style-type: none"> <li>• It indicates an alarm due to excessive temperature of the cooling condenser: check that the appliance is not close to another very hot one (e.g. oven) or that the ambient temperatures do not exceed 43°C.</li> <li>• Check that air filter "C" (if present) is not clogged, if necessary clean it (see <b>F11</b> on page 15).</li> <li>• Check that the inlet water pressure is between 1 Bar and 5 Bar.</li> </ul> <p>If none of these solutions solves the problem, contact Technical Assistance.</p>



## Alarms

RED BUTTON APPEARANCE	WHAT IT MEANS...	SOLUTION
  NW	If BOTH ON: Condenser sensor fault	If BOTH ON: Contact Technical Service
  NU	If BOTH FLASHING slowly: Lack of water alarm	If BOTH FLASHING slowly: check that the water system and the water inlet are not blocked
  NU	If BOTH FLASHING QUICKLY: Restart following a water loading error	
  NW	If BOTH FLASHING QUICKLY: Freezing cycle too long alarm	Contact Technical Service
  NU		
  NW	If BOTH FLASHING QUICKLY: Water temperature sensor fault	Contact Technical Service
  NU	* The yellow defrost light is located on the indicator panel inside the appliance.	
  NW	If BOTH FLASHING QUICKLY: Faulty ice thickness sensor or water level sensor.	Contact Technical Service
  NU		

## EU DECLARATION OF CONFORMITY

2011/65/EU; 2014/30/EU; 2014/35/EU;

**Scotsman**

We

Scotsman Ice Systems (SuZhou) Co., Ltd  
 Building 5, No. 525 South Lingang RD, Yuewang, Shaxi Town, Taicang City,  
 Jiangsu Province China 215437

declare under our responsibility that the product:

FABBRICATORE DI GHIACCIO

NU 100|150|220|300

NW 307|308|457|458|507|508|608|1008|1408

To which this declaration refers, is in compliance with Directives:

- 2011/65/EU "RoHS";

and the following standards or other regulatory documents:

EN 60335-1 (2012) + A11 (2012) + AC (2014) + A13 (2017); EN 60335-2-24 (2010); EN 55014-1 (2006) + A1 (2009) + A2 (2011); EN 55014-2 (1997) + A1 (2001) + A2 (2008); EN 61000-3-2 (2006) + A1 (2009) + A2 (2009); EN 61000-3-3 (2008); EN 61000-4-2 (2009); EN 61000-4-3 (2006) + A1 (2008) + A2 (2010); EN 61000-4-4 (2012)2; EN 61000-4-5 (2006); EN 61000-4-6 (2009); EN 61000-4-11 (2004); EN 62233 (2008)

POGLIANO MILANESE  
 29/03/2022

SCOTSMAN ICE S.r.l.  
 Ing. Tommaso Vania  
 Technical Director  
 20005 Pogliano Milanese  
 (Milan) Italy

Rachel Zhou  
 Managing Director  
 Shanghai, China 200235

**CE**

Any unauthorized reproduction, even partial, of the content of these instructions is expressly prohibited. These instructions and all accompanying documentation have been checked prior to sale. If errors or inaccuracies are found, please inform the Manufacturer. The manufacturer reserves the right to make improvements to the appliance or accessories at any time, without notice. Measurements are purely indicative and not binding. In the event of disputes, the original language of the manual is Italian. The Manufacturer is not responsible for any translation/interpretation errors.



SCOTSMAN Srl  
Scotsman Ice Srl - Via Lainate 31  
20005 Pogliano Milanese - Milano - Italy  
Phone: +39 02 93960 208  
Fax: +39 02 93960201  
sales@scotsman.it

