



Lavasol[™] 6 is a low pH (acidic) liquid formulation, combining select chelants and solubilizing agents to remove metal hydroxides, calcium carbonate, calcium phosphate and other similar scales. Lavasol[™] 6 provides broad spectrum scale removal, and is ideal for situations where limited information is available on foulant make-up.

Features / Benefits

- Concentrated cleaner for most efficient shipping and handling provides efficient shipping and handling
- Buffered pH to maintain optimum cleaning performance throughout cleaning cycle
- Best results when used in conjunction with either Lavasol™ 9 or Lavasol™ 7.
- Classified for use in membrane systems producing drinking water (ANSI/NSF Standard 60)

Uses

- For use on reverse osmosis (RO), nanofiltration (NF), ultrafiltration (UF) and micro-filtration (MF) membranes
- Formulated to dissolve inorganic precipitants from the membrane surface
- To aid in the removal of carbonates, phosphates, metal hydroxides and similar inorganic foulants

Specifications

Appearance	Pale yellow liquid
pH (2% solution)	1.00 - 2.00
Density (kg/L)	1.10 - 1.30



Packaging

Pail: 5 gallon/18.9 liter Tote: 275 gallon/1,040 liter

Drum: 55 gallon/208 liter

For special packaging options, please contact PWT or your local distributor.






General Mixing & Application Instructions for Lavasol™ 6

- 1. Inspect all cleaning system components to include CIP tank, hoses, and cartridge filters. Flush or replace if necessary. Fill cleaning tank with RO permeate or DI water. Turn on agitator or tank recirculation pump.
- 2. Slowly add Lavasol™ 6 to cleaning tank (1 gal [3.8 L] of Lavasol™ for every 50 gal [189 L] of water). Mix thoroughly. The solution pH should match product specification. If necessary, adjust pH with a membrane–approved chemical such as caustic, citric, sulfuric or hydrochloric acid. The solution should be heated up to 45°C to improve cleaning efficacy.
- 3. Circulate solution in the same direction as the feed flow. Typical circulation times are 30-90 minutes.* PWT recommends cleaning each stage of the system separately. Maximum flow rate per pressure vessel is 40 gpm (152 Lpm) for 8-inch elements and 10 gpm (38 Lpm) for 4-inch elements. Maximum pressure for cleaning is 60 psig (4.2 kg/cm²).
- 4. In cases of heavy fouling, divert the first 10-20% of cleaning solution to drain to prevent redeposition of removed solids.
- 5. Rinse with RO permeate before returning system to service. When returning unit to service, divert product water to drain until any residual cleaning solution has been rinsed from system.
 - *Depending on the nature of the fouling, a soak period may be necessary for optimum results. Please contact PWT or your local distributor for custom cleaning procedure, or consult PWT's Technical Bulletin 503 for further cleaning recommendations.

ProDose XPRT™ - Scaling Prediction Software

ProDose XPRT™ uses the most accurate scaling prediction calculations available to accurately determine effective antiscalant dosage, and cleaning chemical usage. The user can enter multiple cases to study various operating conditions, directly enter concentrate analysis, and select the best PWT product and dosage for the application.

ProDose XPRT™ is available upon request only. Please contact your PWT representative for more information.

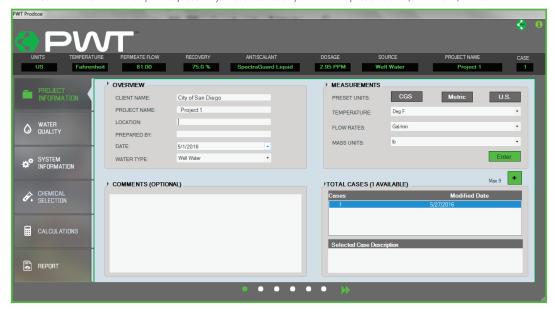



PWT Headquarters & Manufacturing 1048 La Mirada Court, Vista, California 92081

Toll-Free: 800.914.9072 | Direct: 760.639.4400 | Fax: 760.639.4439 | Email: sales@pwtchemicals.com | www.pwtchemicals.com | fice: 12 DHT10B, Dong Hung Thuan Ward, District 12, HCMC, Viet Nam

